TX-SV636

Ref. No. 3549

ONKYO SERVICE MANUAL

AUDIO VIDEO CONTROL
TUNER AMPLIFIER
MODEL TX-SV636

USA / Worldwide models

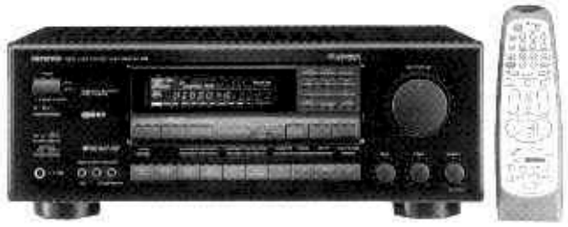

European model

Black model

BMDN	120V AC, 60Hz
BMP	230V AC, 50Hz
BMW	120V or 220V ~ 230V AC, 50/60Hz

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

ONKYO®
AUDIO COMPONENTS

TABLE OF CONTENTS

Specifications 2
Service procedures 3
Exploded view (120V/Worldwide models) 4
Parts list (120V/Worldwide models) 5
Exploded view (230V model) 6
Parts list (230V model) 7
Block diagram (Tuner section) 8
  120V model 8
  Other models 9
Microprocessor connection diagram 10
Microprocessor descriptions 11
IC block diagrams and descriptions 12
Adjustment procedures 23
Pc board-parts list (Amplifier section) 25
Schematic diagram 27
Printed circuit board view 31
Schematic diagram 35
Printed circuit board view 39
Printed circuit board-parts list 41
Schematic diagram 43
Pc board-parts list (Tuner section) 47
Pc board view (Amplifier section) 49
Packing view 51
Notes 52

TX-SV636

SPECIFICATIONS

AMPLIFIER SECTION

Power Output	
Stereo mode	
Front Main L/R channels:	100 watts per channel, min. RMS at 8 ohms, both channels driven from 20 Hz to 20 kHz with no more than 0.08% total harmonic distortion.
Continuous Power output:	2 × 120 watts at 8ohms (DIN)
Surround mode and Multi source mode	
Front Main L/R and Center channels:	85 W + 85 W + 85 W (1 kHz, 0.08%, 8 ohms)
Rear channels (Rear only driven):	30 W + 30 W (1 kHz, 0.8 %, 8 ohms)
Remote channels:	85 W + 85 W (1 kHz, 0.1%, 8 ohms)
Total Harmonic Distortion:	0.08% at rated power (Front)
IM Distortion:	0.08% at rated power (Front)
Damping Factor:	60 at 8 ohms (Front)
Input Sensitivity and Impedance	
Phono:	2.5 mV/50 kohms
CD/Tape Play:	150 mV/50 kohms
Output level and impedance	
Tape Rec:	150 mV/2.2 kohms
Pre out:	1 V/ 2.2 kohms
Phono Overload:	120 mV RMS at 1 kHz, 0.5% T.H.D.
Frequency Response:	20 Hz to 30 kHz, ±1 dB
RIAA Deviation:	20 Hz to 20 kHz, ±0.8 dB
Tone Control	
Bass:	±10 dB at 100 Hz
Treble:	±10 dB at 10 kHz
Signal to Noise Ratio	
Phono:	80 dB (IHF A, 5 mV input)
CD/Tape:	100 dB (IHF A)
Muting:	–∞ dB

VIDEO SECTION

Signal sensitivity and impedance:	1 Vp-p, 75 ohms (VDP/VCR input, output)

TUNER SECTION

FM

Tuning Range:	87.5 — 108.0 MHz (50 kHz steps)
Usable Sensitivity	
Mono:	11.2 dBf, 1.0 µV (75 ohms), IHF 0.9 µV (26 dB S/N, 40 kHz Div.) 75 ohms, DIN
Stereo:	17.2 dBf, 2.0 µV (75 ohms), IHF 23 µV (46 dB S/N, 40kHz Div.) 75 ohms, DIN
50dB Quieting Sensitivity	
Mono:	17.2 dBf, 2.0 µV (75 ohms)
Stereo:	37.2 dBf, 20 µV (75 ohms)
Capture Ratio:	1.5 dB
Image Rejection Ratio	
U.S.A. & Canadian models:	40 dB
Other area models:	85 dB
IF Rejection Ratio:	90 dB
Signal-to-Noise Ratio	
Mono:	73 dB
Stereo:	67 dB
Alternate Channel Attenuation:	55 dB
AM Suppression Ratio:	50 dB
Total Harmonic Distortion	
Mono:	0.15%
Stereo:	0.25%
Frequency Response:	30 Hz — 15 kHz, ±1.5 dB
Stereo Separation:	45 dB at 1 kHz 30 dB at 100 Hz — 10 kHz

AM

Tuning Range	
U.S.A. & Canadian models:	530 — 1,710 kHz (10 kHz steps)
European & Australian models:	522 — 1,611 kHz (9 kHz steps)
Worldwide models:	531 — 1,602 kHz (9 kHz steps), 530 — 1,710 kHz (10 kHz steps)
Usable Sensitivity:	30 µV
Image Rejection Ratio:	40 dB
IF Rejection Ratio:	40 dB
Signal-to-Noise Ratio:	40 dB
Total Harmonic Distortion:	0.7%

GENERAL

Power Supply:	
U.S.A. & Canadian models:	AC 120 V, 60 Hz
European & Australian models:	AC 230 V, 50 Hz
Worldwide models:	AC 220–230 V and 120 V switchable, 50/60 Hz
Power Consumption	
U.S.A & Canadian models:	4.3 A
Other area models:	410 W
Dimensions (W × H × D):	455 × 170 × 389 mm 17-15/16" × 6-11/16" × 15-5/16"
Weight:	13.0 kg (28.7 lbs)

REMOTE CONTROLLER

U.S.A. & Canadian models:	RC-P101S
Other area models:	RC-P201S
Transmitter:	Infrared
Signal range:	Approx. 5 meters, 16 ft.
Power supply:	Two "AA" batteries (1.5V × 2)

Specifications and features are subject to change without notice.

SERVICE PROCEDURES

1. Replacing the fuses

This symbol located near the fuse indicates that the fuse used is fast operating type. For continued protection against fire hazard, replace with same type fuse. For fuse rating refer to the marking adjacent to the symbol.

Ce symbole indique que le fusible utlise est a rapide. Pour une protection permanente, n'utiliser que des fusibles de meme type. Ce darnier est indique la qu le present symbol est appose.

CIRCUIT NO.	PART NO.	DESCRIPTION
F901	252166Y	6.3A-UL/T-237, Primary <D/W>
F902	252076	3.15A-TSC, Primary <P/W>
F903	252075	2.5A-SE-EAK, Primary <P>

NOTE: <D> :120V model only
<P> :230V model only
<W>:Worldwide model only

2. To Initialize the unit

This device employs a microprocessor to perform various functions and operations. If interference generated by an external power supply, radio wave, or other electrical source results in accident which causes the specified operations and functions to operate abnormally.

To perform a result, please follow the procedure below.

1. **Press and hold down the VIDEO-1 button, then press the POWER button.**
2. **After "clear" is displayed, the preset memory and each mode stored in the memory, such as surround, are initialized and will return to the factory settings.**

3. Safety-check out

(Only U.S.A. model)

After correcting the original service problem, perform the following safety check before releasing the set to the customer. Connect the insulating-resistance tester between the plug of power supply cord and the screw on the back panel.

Specifications: 3.3 Mohm±10% at 500V.

4. Change of voltage

Worldwide models are equipment with a voltage selector to conform with local power supplies. This switch is located on the back panel.

Be sure to set this switch to match the voltage of the power supply in your area before turning the power switch on.

This switch is set to 220V at the factory. Voltage is changed by sliding the groove in the switch with the screwdriver to the right or left. Confirm that the switch has been moved all the way to the right or left before turning the power switch on.

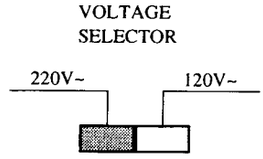

5. Memory preservation

This unit does not require memory preservation batteries.

A built-in memory power back-up system preserves contents of the memory during power failures and even when the unit is unplugged.

The unit must be plugged in and the power switch turned on and off once in order to charge the back-up system. Note that since this is not a permanent memory, the power switch must be turned on and off a few times each month the keep the back-up system operative.

The period of the time during which memory contents are preserved after power has last been turned off varies depending on climate and placement of the unit. On the average, memory contents are protected over a period of 3 to 4 weeks (a minimum of 2 weeks) after the last time power has been turned off. This period is shorted when the unit is exposed to very high humidity or used in an area with an extremely humid climate.

6. Setting the tuning step frequency

Worldwide models are equipped with a step band selector switch. This switch is located on the back panel. This switch is set to 9 kHz at the factory, but may have to be reset to 10 kHz depending on the area where the unit is used.

	AM band step
Europe:	9 kHz
U.S.A.:	10 kHz

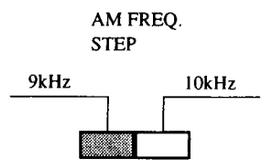

7. Changing the band step

With the exception of the worldwide models, a tuning step selector switch is not provided. When you change the band step, change the parts as shown below.

	To 10 kHz	To 9 kHz
R764	1.8 kohm	3 kohm

TX-SV636

EXPLODED VIEW

120V / Worldwide models

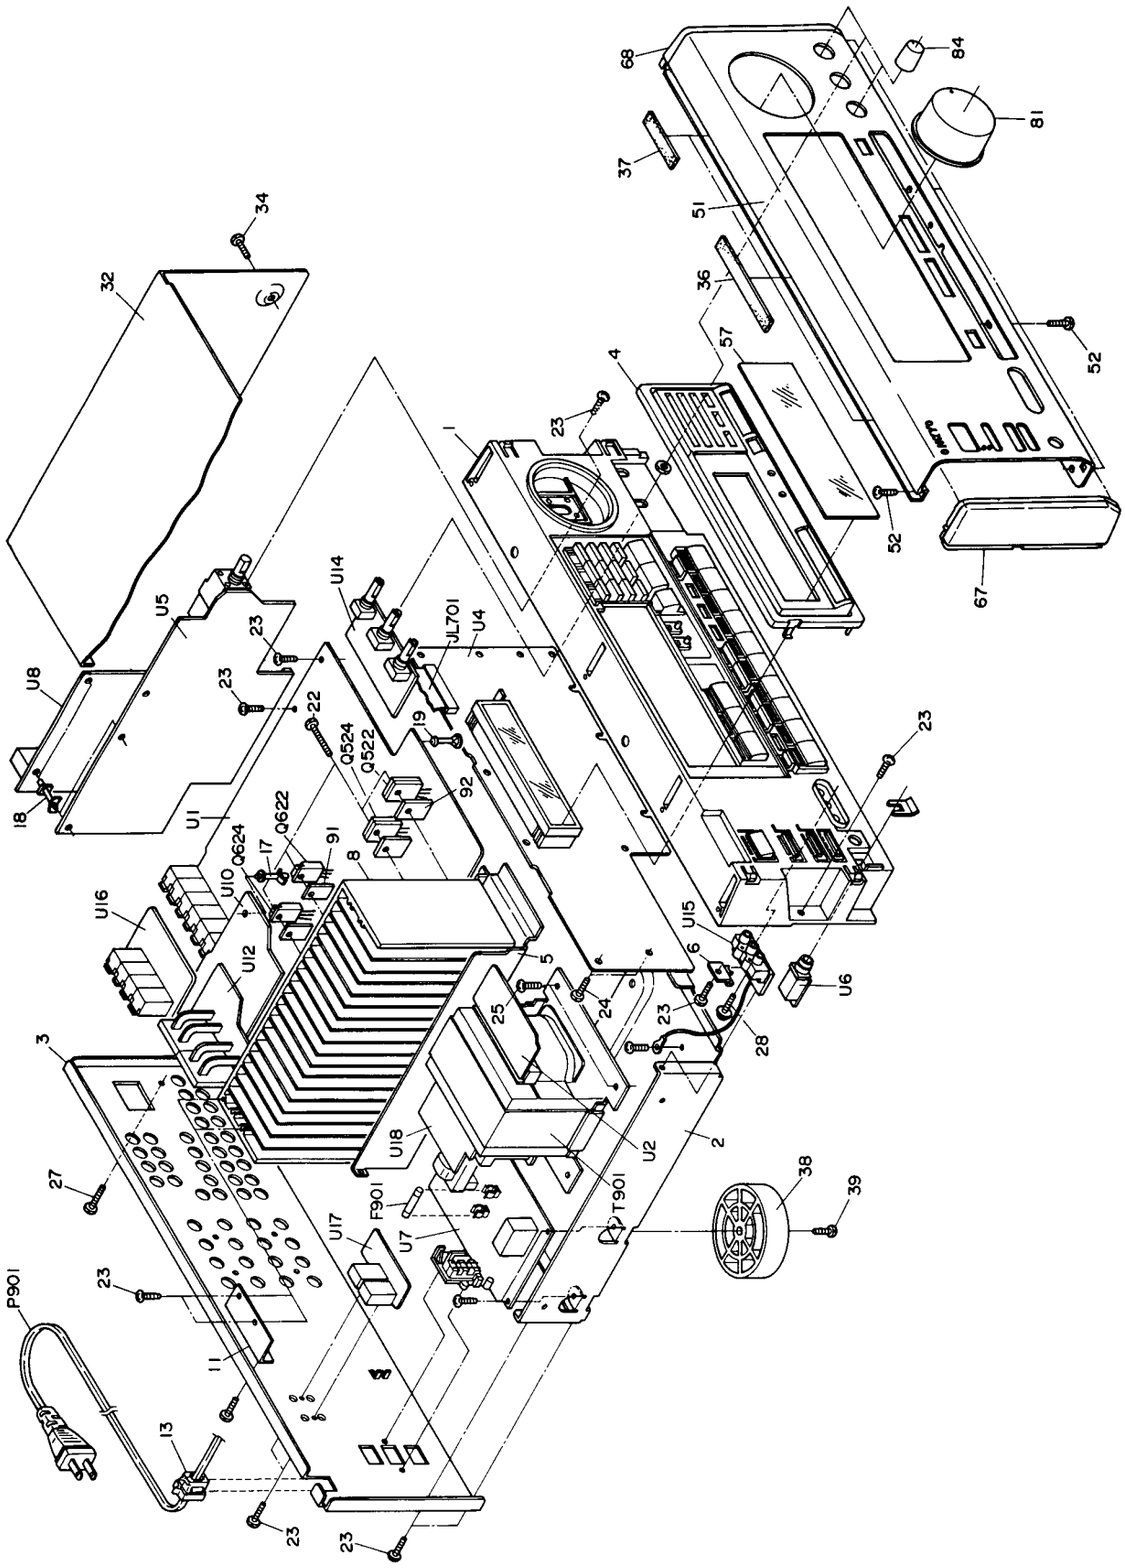

PARTS LIST

REF.NO.	PART NO.		DESCRIPTION
1	27110833CY		Front bracket
2	27100291Y		Chassis
3	27122225Y		Rear panel <D>
	27122228Y		Rear panel <W>
4	27215253AY		Decorative frame
5	27130743AY		Bracket H
6	27262583-1Y		Plate T
8	27160347-1Y		Radiator
9	27130742Y		Bracket C
11	27141607AY		Retainer H
13	27300750	⚠	Cord bushing
17	27190369		KGLS-22S, Holder
18	27190062		KGLS-12S, Holder
20	27190926-1Y		KGPS-18RF, Holder
22	801433		3SMS8W.SW+14B(BC), Special screw
23	838130088		3TTB+8B, Self-tapping screw
24	838130088		3TTB+8B, Self-tapping screw
25	830440089		4TTC+8C(BC), Self-tapping screw
27	838230088		3TTB+8B(Ni), Self-tapping screw
28	831430088		3TTW+8B(BC), Self-tapping screw
32	28184540AY		Top cover
33	838430088		3TTB+8B(BC), Self-tapping screw
34	838440089		4TTB+8C(BC), Self-tapping screw
36	28140680		0.5×180×8, Cushion
37	28141305Y		0.8×57×8, Cushion
38	27175300-2Y		Leg
39	838130088		3TTB+8B, Self-tapping screw
51	1A651121Y		Front panel ass'y
52	838130088		3TTB+8B, Self-tapping screw
54	8910301		CS-3, CS ring
57	28191699AY		Clear plate
59	28198813Y		Facet
61	28135199Y		Badge
67	28125268Y		End cap L
68	28125267Y		End cap R
81	28325057		Knob, Volume
84	28325055Y		Knob, Tone
91	223021	⚠	Isolation sheet
92	223023	⚠	Isolation sheet
99	260208		Wire ties
F901	252166Y	⚠	6.3A-UL/T-237, Primary fuse
F902	252076	⚠	3.15A-SE-EAK, Primary fuse <W>
JL701	2047402012Y		NCFC7-402012,Flexible flat cable
P901	253192HIT	⚠	AS-UC-6#18, Power supply cord <D>
	253233KAW	⚠	AS-CEE-2, Power supply cord <W>
Q521	2201482,	*	2SC3281-R,
Q522	2201483,	*	2SC3281-O,
	2202822 or	*	2SC5200-R or
	2202823	*	2SC5200-O, Transistors
Q523	2201472,	*	2SA1302-R,
Q524	2201473,	*	2SA1302-O,
	2202812 or	*	2SA1943-R or
	2202813	*	2SA1943-O, Transistors
Q621	2202882,	*	2SD2387-R,
Q622	2202883,	*	2SD2387-O,
	2202903,	*	2SD2389-O,
	2202904 or	*	2SD2389-Y or
	2202906	*	2SD2389-P, Transistors
Q623	2202872,	*	2SB1558-R,
Q624	2202873,	*	2SB1558-O,
	2202893,	*	2SB1559-O,
	2202894 or	*	2SB1559-Y or
	2202896	*	2SB1559-P, Transistors
T901	2301071Y	⚠	NPT-1230D, Power transformer <D>
	2301091Y	⚠	NPT-1235D, Power transformer <C>
	2301073Y	⚠	NPT-1230DG, Power transformer <W>
U1	1A651568-1AY		NAAR-5768-1A, Main circuit pc board ass'y <D>
	1A651568-1CY		NAAR-5768-1A, Main circuit pc board ass'y <C>
	1A651568-1DY		NAAR-5768-1D, Main circuit pc board ass'y <W>
U2	1A651569-1AY		NAETC-5769-1A, Secondary circuit pc board ass'y <D>
	1A651569-1CY		NAETC-5769-1C, Secondary circuit pc board ass'y <C>
	1A651569-1DY		NAETC-5769-1D, Secondary circuit pc board ass'y <W>
U4	1A651570-1AY		NADG-5770-1A, Display circuit pc board ass'y <D>
	1A651570-1CY		NADG-5770-1C, Display circuit pc board ass'y <W>
U5	1A651571-1AY		NAAF-5771-1A, Master volume circuit pc board ass'y <D>
	1A651571-1CY		NAAF-5771-1C, Master volume circuit pc board ass'y <W>
U6	1A651572-1AY		NAETC-5772-1A, Headphone terminal pc board ass'y <D>
	1A651572-1CY		NAETC-5772-1C, Headphone terminal pc board ass'y <C>
	1A651572-1DY		NAETC-5772-1D, Headphone terminal pc board ass'y <W>
U7	1A651573-1AY		NAPS-5773-1A, Primary circuit pc board ass'y <D>
	1A651573-1CY		NAPS-5773-1C, Primary circuit pc board ass'y <W>
U8	1A651574-1AY		NARF-5774-1A, Tuner circuit pc board ass'y <D>
	1A651574-1CY		NARF-5774-1C, Tuner circuit pc board ass'y <W>
U10	1A651575-1AY		NAETC-5775-1A, Video circuit pc board ass'y <D>
	1A651575-1CY		NAETC-5775-1C, Video circuit pc board ass'y <W>
U12	1A651576-1AY		NAETC-5776-1A, Speaker terminal pc board ass'y <D>
	1A651576-1CY		NAETC-5776-1C, Speaker terminal pc board ass'y <W>
U14	1A651577-1AY		NAAF-5777-1A, Tone control circuit pc board ass'y <D>
	1A651577-1CY		NAAF-5777-1C, Tone control circuit pc board ass'y <W>
U15	1A651578-1AY		NAETC-5778-1A, Front terminal pc board ass'y <D>
	1A651578-1CY		NAETC-5778-1C, Front terminal pc board ass'y <W>
U16	1A651579-1AY		NAETC-5779-1A, Pre. output terminal pc board ass'y <D>
	1A651579-1CY		NAETC-5779-1C, Pre. output terminal pc board ass'y <W>
U17	1A651580-1AY		NAETC-5780-1A, MR/RI terminal pc board ass'y <D>
	1A651580-1CY		NAETC-5780-1C, MR/RI terminal pc board ass'y <W>
U18	1A651581-1AY		NAETC-5781-1A, Transformer terminal pc board ass'y <D>
	1A651581-1CY		NAETC-5781-1C, Transformer terminal pc board ass'y <W>

NOTE: THE COMPONENTS IDENTIFIED BY MARK ⚠ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

BLOCK DIAGRAM

Tuner section
120V model

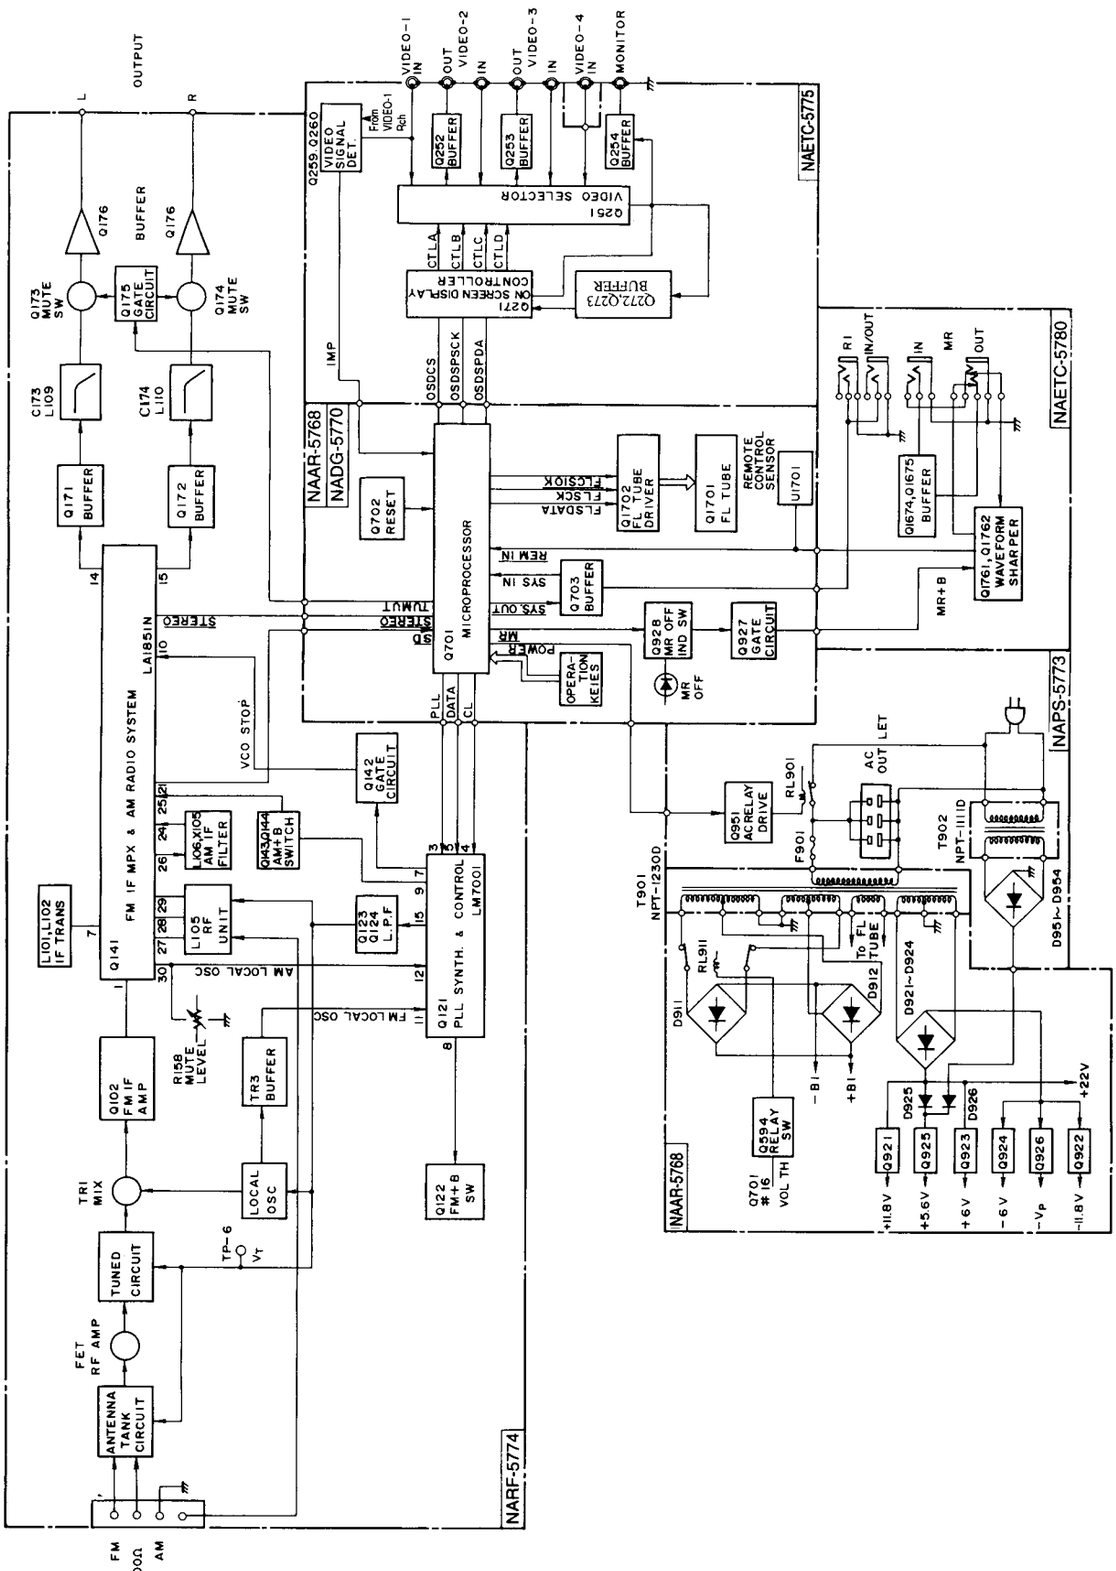

MICROPROCESSOR CONNECTION DIAGRAM

μ PD78016CW-053 (MICROPROCESSOR)

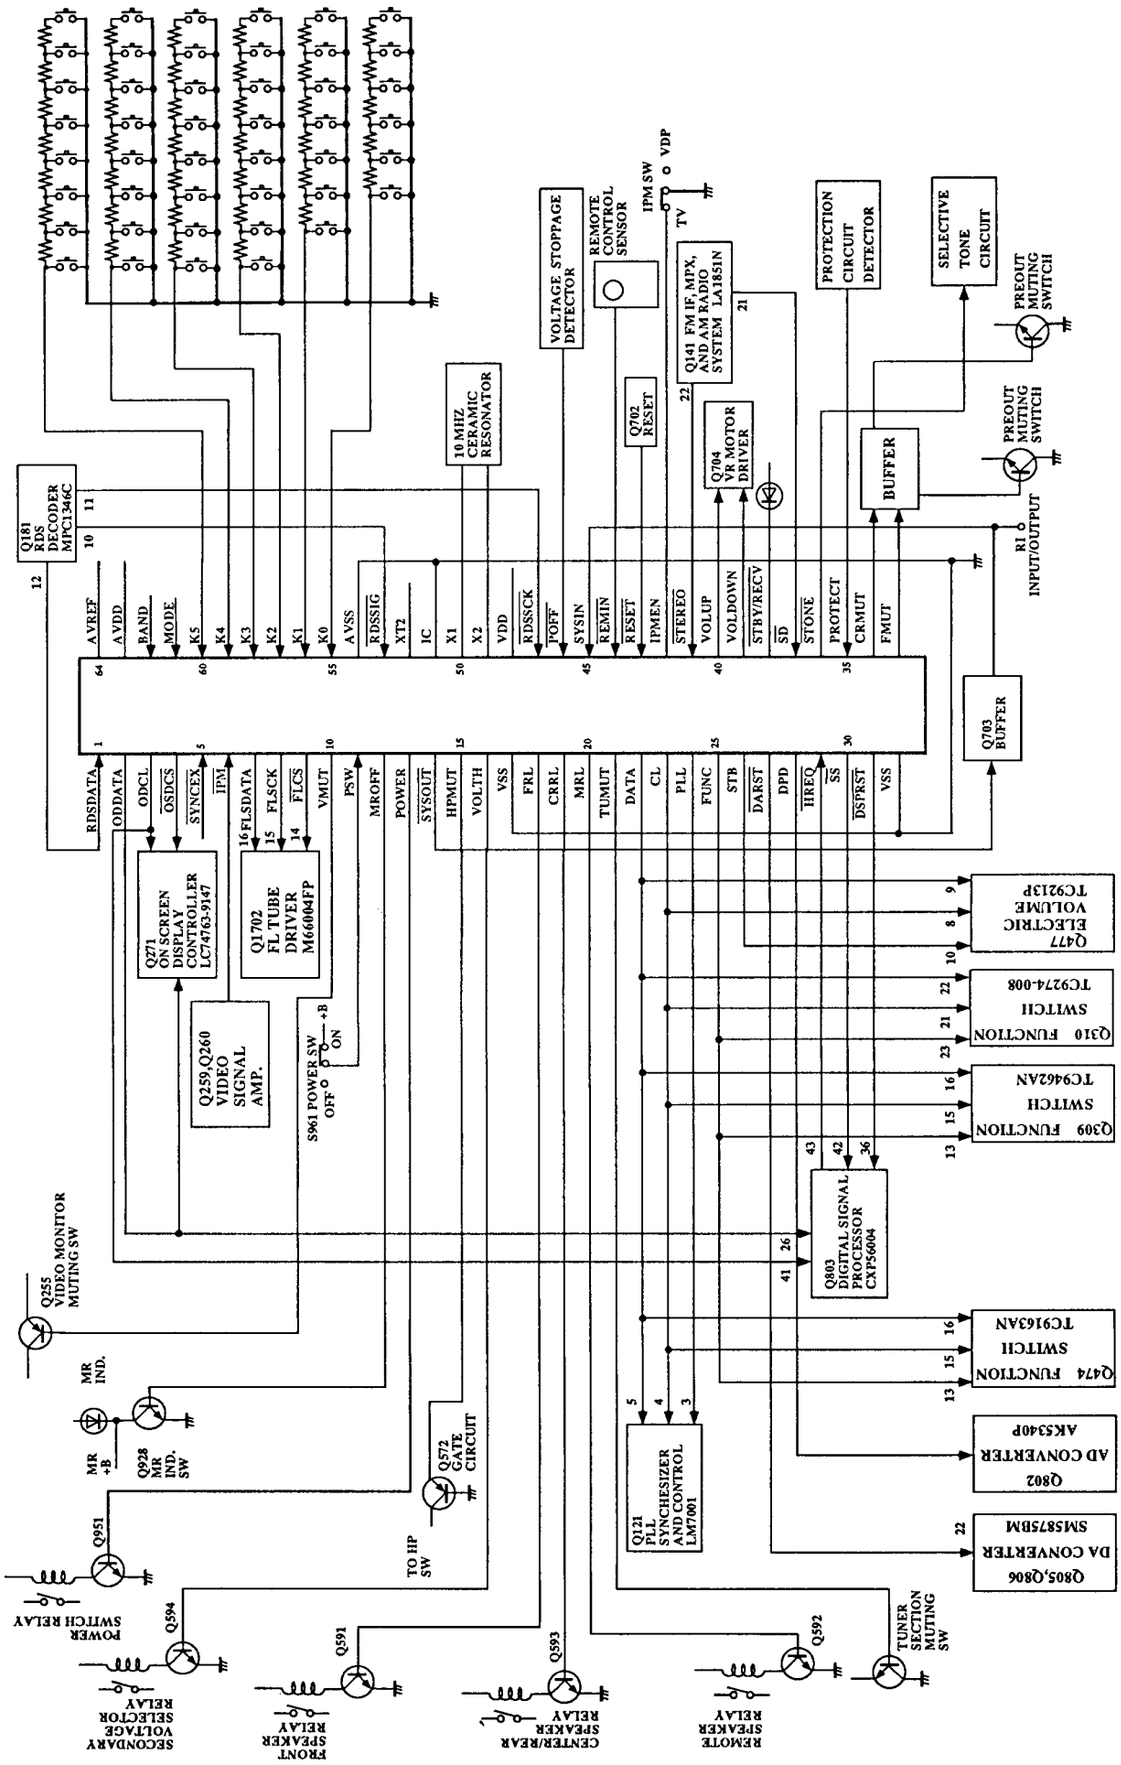

MICROPROCESSOR TERMINAL DESCRIPTIONS

Pin No.	Function	I/O	Description
1	RDSDATA	I	Data input pin from RDS decoder μ PD1346CS
2	ODDATA	O	Connect to the terminal SIN of OSD controller and terminal MOSI of DSP IC.
3	ODCL	O	Connect to the terminal SCK of OSD controller and terminal SCK of DSP IC.
4	$\overline{\text{OSDCS}}$	O	Connect to the terminal CS of OSD controller
5	$\overline{\text{SYNCEX}}$	I	Synchronizing signal control input pin for On-screen display controller. L:External synchronizing H:Internal synchronizing
6	$\overline{\text{IPM}}$	I	Detector input pin for intelligent power management
7	FLSDATA	O	Data output pin for FL tube driver M66004FP
8	FLSCK	O	Clock output pin for FL tube driver M66004FP
9	$\overline{\text{FLCS}}$	O	Chip select output pin for FL tube driver M66004FP
10	VMUT	O	Muting control output pin for video signal
11	PSW	I	Power switch connection pin
12	MROFF	O	Multi room indicator and control output pin
13	POWER	O	Power source control output pin
14	$\overline{\text{SYSOUT}}$	O	System code output pin
15	HPMUT	O	Muting control output pin for headphone signal
16	VOLTH	O	Secondary voltage control output pin
17	VSS		Ground pin
18	FRL	O	Relay control pin for front speaker
19	CRRL	O	Relay control pin for center and rear speakers
20	MRL	O	Relay control pin for multi source
21	TUMUT	O	Muting output pin for tuner section
22	DATA	O	Data output pin. Connect to the terminals DATA of function switch ICs, PLL and electric volume IC.
23	CL	O	Clock output pin. Connect to the terminals CK of function switch ICs, PLL and electric volume IC.
24	PLL	O	Chip enable output pin for PLL IC
25	FUNC	O	Connect to terminal ST of function switches and terminal STB of TC9274N.
26	STB	O	Connect to the terminal STB of electric volume.
27	DARST	O	Reset output pin for DA converter.
28	DPD	O	Control output pin for digital power down.
29	HREQ	I	Connect to the terminal HREQ of DSP IC.
30	$\overline{\text{SS}}$	O	Connect to the terminal SS of DSP IC.
31	$\overline{\text{DSPRST}}$	O	Reset output pin for DSP IC.
32	VSS		Ground pin
33	FMUT	O	Muting output pin for front amplifier
34	CRMUT	O	Muting output pin for center and rear amplifiers
35	PROTECT	I	Detector input pin of protection circuit. H:On
36	$\overline{\text{STONE}}$	O	Selective tone circuit control output pin. L:On
37	$\overline{\text{SD}}$	I	Detector input pin of broadcast more than muting level
38	$\overline{\text{STBY/RECV}}$	O	Stand-by and received indicator output pin
39	VOLDOWN	O	Volume control output pin
40	VOLUP	O	Refer table 1.
41	$\overline{\text{STEREO}}$	I	Detector input pin of FM stereo broadcast
42	IPMEN	I	IPM switch connection pin
43	$\overline{\text{RESET}}$	I	System reset input pin
44	$\overline{\text{REMIN}}$	I	Remote control signal input pin
45	SYSIN	I	System code input pin
46	$\overline{\text{POFF}}$	I	Power stoppage detector input pin
47	$\overline{\text{RDSSCK}}$	I	Clock input pin from RDS decoder IC μ PD1346CS
48	VDD		Power supply pin (+5V)
49	X2		Resonator connection terminal for main system clock
50	X1		Connect the ceramic resonator 10MHz.
51	IC		Internal connection pin. Connect to the ground terminal.
52	XT2		Crystal connection pin for sub system clock resonator
53	$\overline{\text{RDSSIG}}$	I	Detector input pin of RDS broadcast. L:RDS broadcast
54	AVSS		Ground pin of A/D converter
55	K0	I	Operation key connection pin
56	K1	I	Operation key connection pin
57	K2	I	Operation key connection pin
58	K3	I	Operation key connection pin
59	K4	I	Operation key connection pin
60	K5	I	Operation key connection pin
61	MODE	I	Initializing input of operation mode
62	BAND	I	Initializing input of band region and RDS function.
63	AVDO		Analogue power supply of A/D converter
64	AVREF		Reference voltage input pin of A/D converter

Operation	#39	#40
VOLUME UP	H	L
VOLUME DOWN	L	H
STOP	H	H

Table 1

LH2464-10 (DRAM)

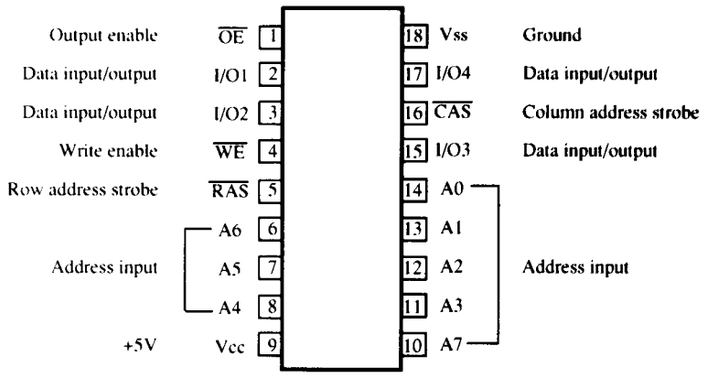

13-BT-138GK (FL TUBE)

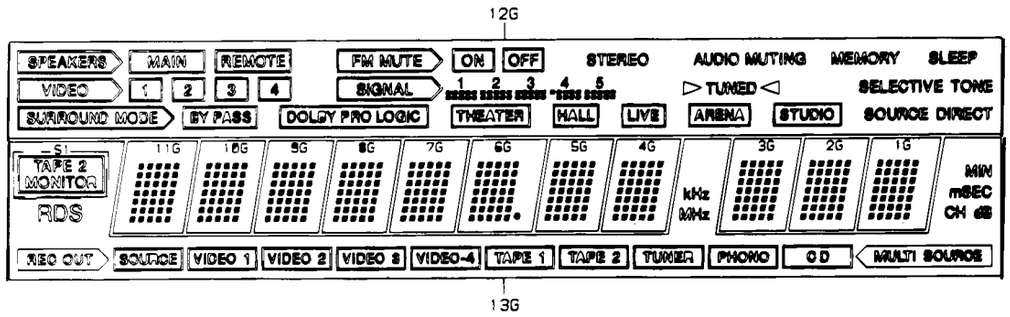

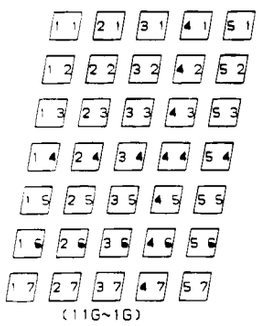



PIN NO.	64	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49
CONNECTION	F2	F2	NP	NP	P36	P35	P34	P33	P32	P31	P30	P29	P28	P27	P26	P25
PIN NO.	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33
CONNECTION	P24	P23	P22	P21	P20	P19	P18	P17	P16	P15	P14	P13	P12	P11	P10	P9
PIN NO.	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17
CONNECTION	P8	P7	P6	P5	P4	3	P2	P1	NC	NC	NC	NC	NC	NC	NC	13G
PIN NO.	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
CONNECTION	12G	11G	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G	NP	NP	F1	F1

NOTE: F1,F2...Filament
NP.....No pin
NC....No connection
1G ~ 13G....Grid

XC56004FJ50 (DSP)

Pin No.	Symbol	Description
1	AGND	GND:EMI control output buffer pin
2	$\overline{\text{AMC0}}$	This output is Chip selector 0 for SRAM accesses.
3	MA15/$\overline{\text{MCS3}}$	Address Line 15/Chip Selector 3
4	MA14	Address output for DRAM access
5	MA13	Address output for DRAM access
6	AVCC	Vcc:EMI address/control output buffer pin
7	MA12	Address output for DRAM access
8	AGND	GND:EMI address output buffer pin
9	QVCC	Vcc:Internal Logic supply pin
10	QGND	GND:Internal Logic supply pin
11	MA11	Address output for DRAM access
12	MA10	Address output for DRAM access
13	MA9	Address output for DRAM access
14	MA8	Address output for DRAM access
15	AGND	GND:EMI address output buffer pin
16	MA7	Address output for DRAM access
17	AVCC	Vcc:EMI address/control output buffer pin
18	MA6	Address output for DRAM access
19	MA5	Address output for DRAM access
20	MA4	Address output for DRAM access
21	AGND	GND:EMI address output buffer pin
22	MA3	Address output for DRAM access
23	MA2	Address output for DRAM access
24	MA1	Address output for DRAM access
25	MA0	Address output for DRAM access
26	SCK/SCL	SPI Serial Clock/I C Serial clock
27	EXTAL	This input should be connected to an external clock source.
28	QVCC	Vcc:Internal Logic supply pin
29	QGND	GND:Internal Logic supply pin
30	PINIT	PLL Initialization pin
31	PGND	GND:PLL supply pin
32	PCAP	Off-chip capacitor connection pin for PLL filter
33	PVCC	Vcc:PLL supply pin
34	SGND	GND:SAI,SHI & ONCE output buffer supply pin
35	MISO/SDA	SPI Master-In-Slave-Out/I C Data and Acknowledge
36	$\overline{\text{RESET}}$	This input is a direct hardware reset of the processor.
37	MODA/$\overline{\text{IRQA}}$	Mode Select A/External Interrupt Request A/STOP Recovery
38	MODB/$\overline{\text{IRQB}}$	Mode Select B/External Interrupt Request B
39	MODC/$\overline{\text{NMI}}$	Mode Select C/Non-Maskable Interrupt Request
40	SVCC	Vcc:SAI,SHI & ONCE output buffer supply pin

Pin No.	Symbol	Description
41	MOSI/HA0	SPI Master-Out-Slave-In/I C Slave Address 0
42	$\overline{\text{SS}}$/HA2	SPI Slave Selector/I C Slave Address 2
43	$\overline{\text{HREQ}}$	Host Request
44	SGND	GND:SAI,SHI & ONCE output buffer supply pin
45	SDO2	Serial Data Output 2
46	SDO1	Serial Data Output 1
47	SDO0	Serial Data Output 0
48	SVCC	Vcc:SAI,SHI & ONCE output buffer supply pin
49	SCKT	Transmit Serial Clock
50	WST	Transmit Word Select
51	SCKR	Receive Serial Clock
52	QGND	GND:Internal Logic supply pin
53	QVCC	Vcc:Internal Logic supply pin
54	SGND	GND:SAI,SHI & ONCE output buffer supply pin
55	WSR	Receive Word Select
56	SDI1	Serial Data Input 1
57	SDI0	Serial Data Input 0
58	DSO	Debug Serial Output
59	DSI/OS0	Debug Serial Input/Chip Status 0
60	DSCK/OS1	Debug Serial Clock/Chip Status 1
61	$\overline{\text{DR}}$	Debug Request Input
62	MD7	Data Bus input/output pin
63	MD6	Data Bus input/output pin
64	MD5	Data Bus input/output pin
65	MD4	Data Bus input/output pin
66	DGND	GND:EMI data bus & GPIO output buffer pin
67	MD3	Data Bus input/output pin
68	MD2	Data Bus input/output pin
69	MD1	Data Bus input/output pin
70	DVCC	Vcc:EMI data bus & GPIO output buffer pin
71	MD0	Data Bus input/output pin
72	DGND	GND:EMI data bus & GPIO output buffer pin
73	GPIO3	General Purpose Input/Output 3
74	GPIO2	General Purpose Input/Output 2
75	GPIO1	General Purpose Input/Output 1
76	GPIO0	General Purpose Input/Output 0
77	$\overline{\text{MRD}}$	Data Read Strobe
78	$\overline{\text{MWR}}$	Data Write Strobe
79	MA17/$\overline{\text{MCS1}}$/$\overline{\text{MRAS}}$	Address Line 17/Chip selector 1/Row Address Strobe
80	MA16/$\overline{\text{MCS2}}$/$\overline{\text{MCAS}}$	Address Line 16/Chip selector 2/Column Address Strobe

LC74763 (TV Character / Pattern Indicator)

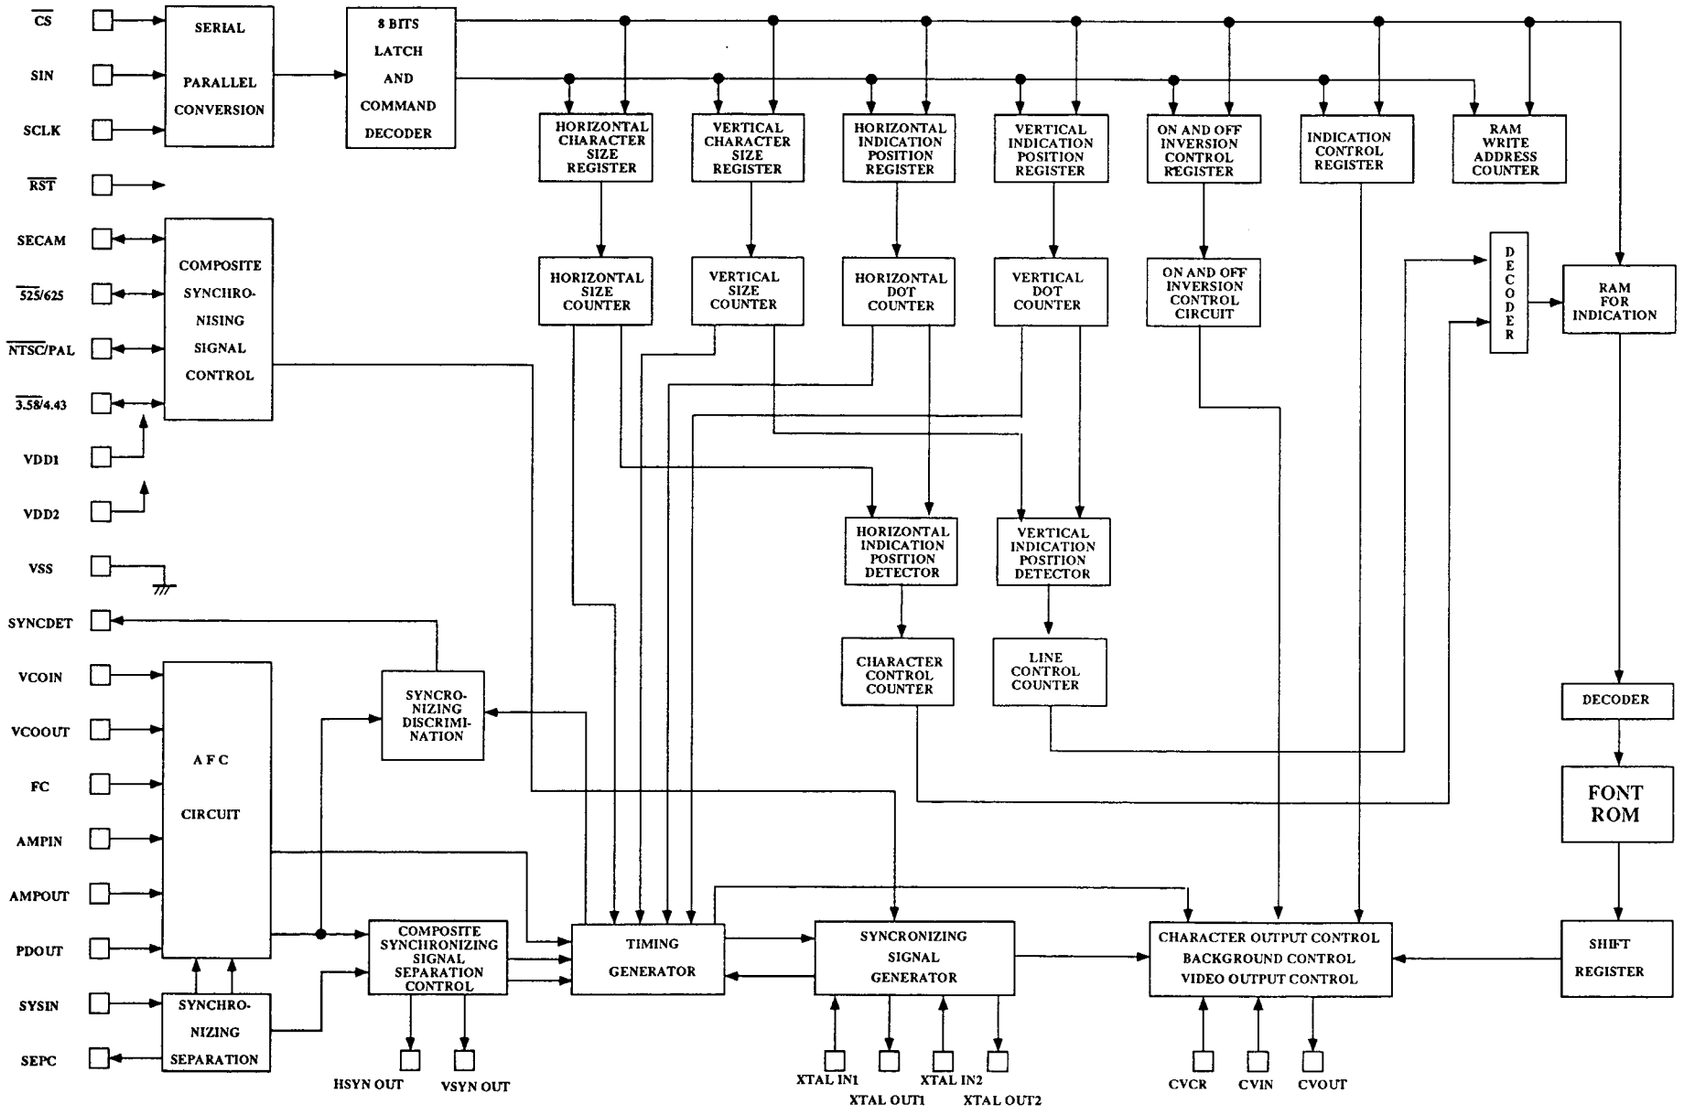

Pin No.	Symbol	Description	Pin No.	Symbol	Description
1	VSS	Ground pin	16	CVOUT	Composite video signal output pin
2	XTAL IN1	Crystal resonator connection pin for internal synchronizing signal generation	17	VDD2	Power supply pin for Composite video signal
3	XTAL OUT1		18	CVIN	Composite video signal input pin
4	HSYNCOUT	Horizontal synchronizing signal output pin	19	CVCR	Chroma signal input pin for SECAM
5	XTAL IN2	Crystal resonator connection pin for internal synchronizing signal generation	20	SYNCIN	Video signal input pin for internal synchronizing separation circ
6	XTAL OUT2		21	SEPC	Bias output pin for internal synchronizing separation circuit
7	VSYNCOUT	Vertical synchronizing signal output pin	22	VSS	Ground pin
8	CS	Chip enable input pin for serial data input	23	PDOUT	Voltage output pin for AFC circuit
9	SIN	Serial data input pin	24	AMPIN	Filter connection pin
10	SCLK	Clock input pin for serial data	25	AMPOUT	
11	SECAM	SECAM mode selector input pin	26	FC	Voltage output pin for AFC circuit
12	525/625	Selector pin for scansion line	27	VCOIN	LC resonator connection pins for VCO
13	NTSC/PAL	Selector pin for NTSC or PAL	28	VCOOUT	
14	3.58/4.43	Selector pin for 3.58MHz or 4.43MHz	29	SYNCDET	External synchronizing signal discrimination output pin
15	RST	System reset input pin	30	VDD1	Power supply pin

LA1851N-F (FM IF, MPX AND AM RADIO SYSTEM)

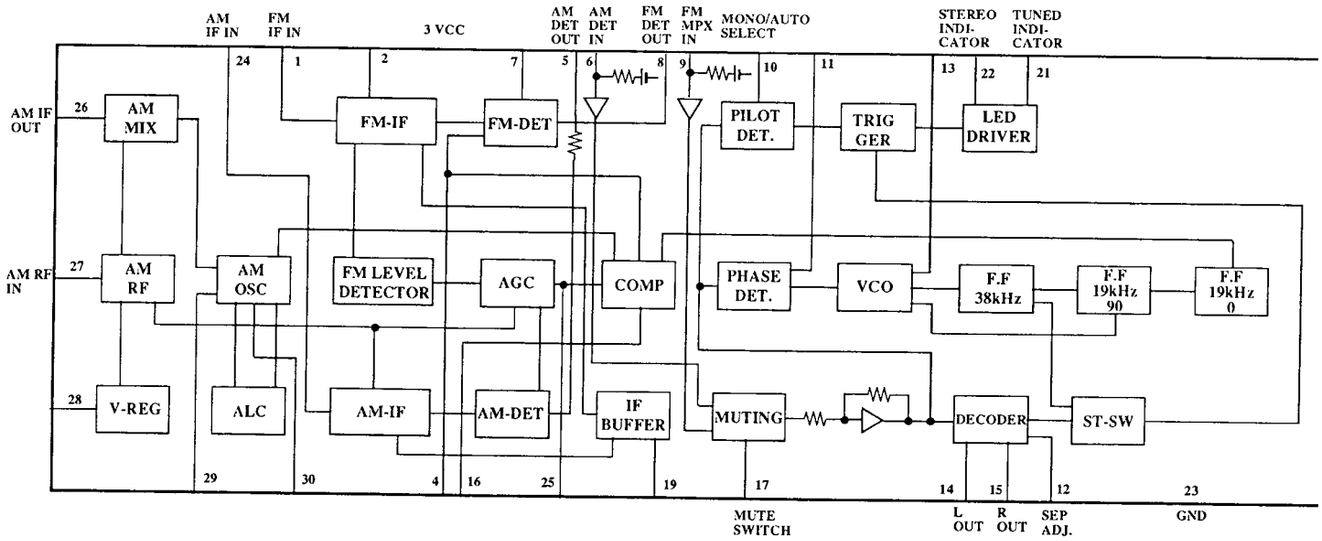

TA7291 (VOLUME MOTOR DRIVER)

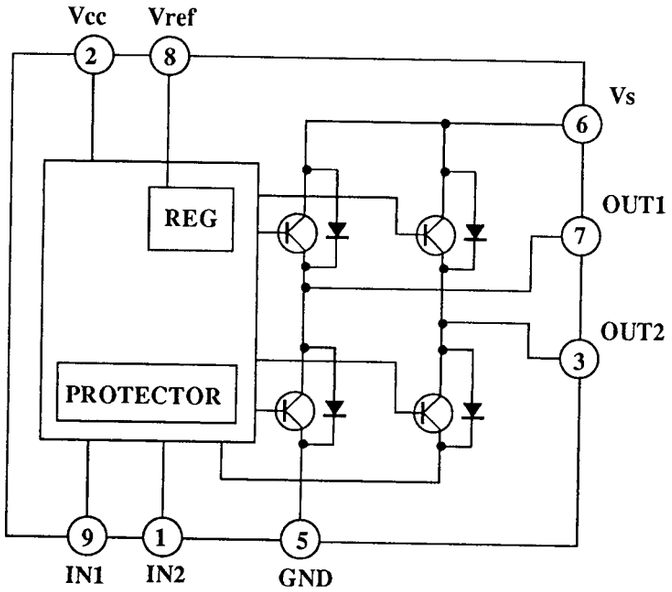

INPUT		OUTPUT		MODE
IN1	IN2	OUT1	OUT2	
0	0	∞	∞	STOP
1	0	H	L	CW/CCW
0	1	L	H	CCW/CW
1	1	L	L	BRAKE

CCW:Counter-clockwise direction
CW:Clockwise direction

ADJUSTMENT PROCEDURES

Preparation

1. Input

FM mono: 1kHz, 75kHz devi., 60dB/μ V

FM stereo: 1kHz, 67.5kHz devi., 60dB/μ V

Pilot signal 19kHz 7.5kHz devi.

AM: 400Hz, 30% mod.

2. Outputs

Connect the non-inductive type resistor of 8 ohms to the all speaker terminals unless otherwise noted.

1. FM ADJUSTMENT

Item	Step	Connection of instrument	FM SG output	Stereo modulator output	Tuning frequency	Output indicator	Adjustment point	Adjust for	Remarks
FM IF/RF	1	Fig.1	99.0MHz 1kHz 75kHz devi. 65dBf(60dB)	———	99.0MHz	DC voltmeter	L101	0±20mV	FM MUTE/MODE switch:OFF/MONO Repeat the steps 1 and 3 until no further adjustment is necessary.
	2					AC voltmeter	IFT on the front end	Maximum	
	3					Distortion analyzer	L102	Minimum	
Stereo Distortion		Fig.2	99.0MHz Ext. mod.65dBf(60dB)	Channel L or R 1kHz	99.0MHz	Distortion analyzer	IFT on the front end	Minimum	Don't turn more than ±180°
Stereo Separation	1	Fig.2	99.0MHz Ext. mod. 65dBf(60dB)	Channel L 1kHz	99.0MHz	Channel R AC voltmeter	R150	Minimum	Maximum and same separation
	2			Channel R 1kHz		Channel L AC voltmeter		Minimum	
Muting Level		Fig.2	99.0MHz 19.2dBf(14dB)	———	99.0MHz	Oscilloscope	R158	Signal output	
RDS		Fig.3	99.0MHz Ext. mod.60dB	RDS data or 57kHz 3% devi.	99.0MHz	Oscilloscope	R191	Maximum	European model only

2. AM ADJUSTMENT

120V model

Step	AM SG output	Tuning Frequency	Output Indicator	Adjustment point	Adjust for
1		530kHz	Digital DC voltmeter	OSC coil on RF block L151	1.4±0.2V
2	600kHz 400Hz 30% mod. 60dB/m	600kHz	AC voltmeter	RF coil on RF block L151	Maximum
3	990kHz 400Hz 30% mod. 60dB/m	990kHz	AC voltmeter	L152	Maximum

Reference Specification
FM tuned voltage:87.5MHz~108.0MHz
More than 1.3V ~Less than 10V
AM tuned voltage:530kHz~1710kHz
1.4±0.2V~Less than 9.0V

230V and Wolrdwide models

Step	AM SG output	Tuning Frequency	Output Indicator	Adjustment point	Adjust for
1		522kHz or 531kHz	Digital DC voltmeter	OSC coil on RF block L151	1.3±0.1V
2	603kHz 400Hz 30% mod. 60dB/m	603kHz	AC voltmeter	RF coil on RF block L151	Maximum
3	999kHz 400Hz 30% mod. 60dB/m	999kHz	AC voltmeter	L152	Maximum

Reference Specification
FM tuned voltage:87.5MHz~108.0MHz
More than 1.3V ~Less than 10V
AM tuned voltage:522kHz~1611kHz
1.3±0.2V~Less than 9.0V
(230V model)
AM tuned voltage:531kHz~1602kHz
1.3V±0.2~Less than 9.0V
(Worldwide model)

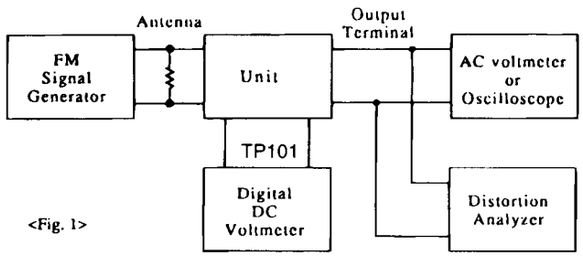

<Fig. 1>

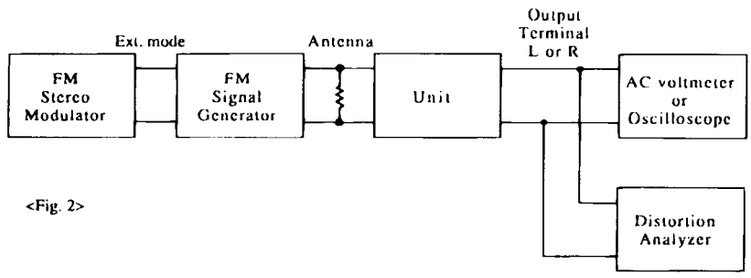

<Fig. 2>

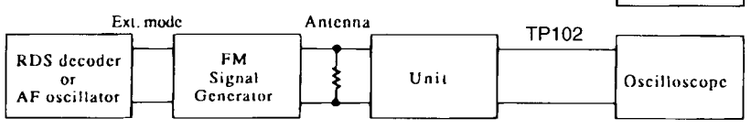

<Fig. 3>

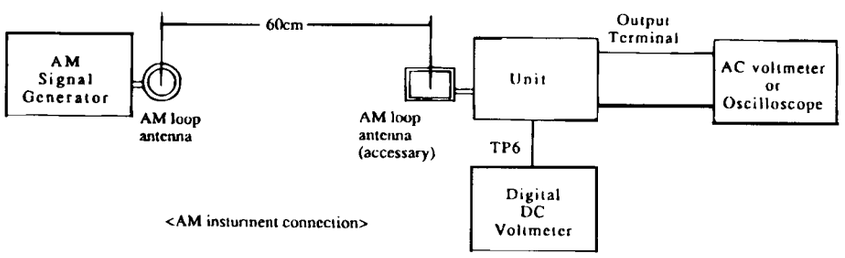

<AM instrument connection>

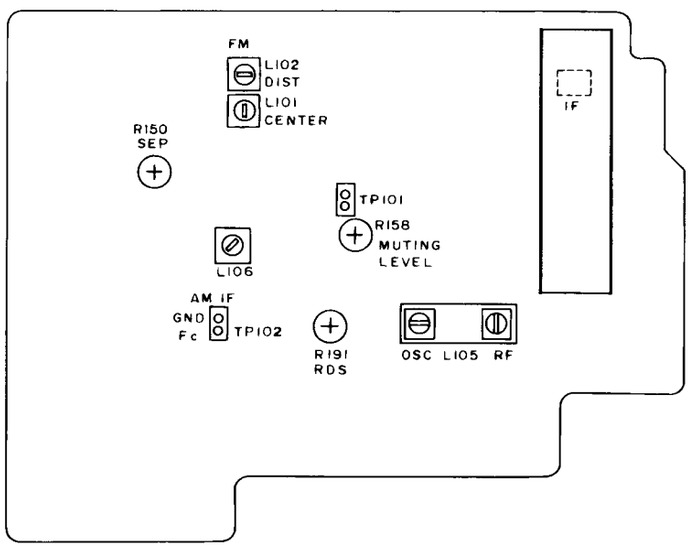

Adjustment point

PRINTED CIRCUIT BOARD-PARTS LIST

CAUTION: Replacement of the transistor of mark *, must be made from the same beta group (Hr original type.

MAIN CIRCUIT PC BOARD (NAAR-5768-1A/1B/1D/1E/1F)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q301	22240191	NJM4565D-D
Q302-Q308	22240293 or	NJM4558L-D or
	22240247	BA15218N
Q309	22240798	TC9162AN
Q310	22240829	TC9274N-008
Q571	22240752	NJM4556L
Q701	22241011Y	μPD78016FCW-053
Q704	22240239	TA7291S
Q921	222780125NEC	78M12HF
Q922	222790125	79M12HF
Q923	222780065JRC	78M06HF
Q924	222790065JRC	79M06HF
Q925	222780565JRC	78M56
	Transistors	
Q515,Q516	2213284 or	2SC1740S-R or
	2212115	2SC2458-GR
Q517,Q518	2203010	2SC5171
Q519,Q520	2203000	2SA1930
Q521,Q522	2201482,	* 2SC3281-R,
	2201483,	* 2SC3281-O,
	2202822 or	* 2SC5200-R or
	2202823	* 2SC5200-O
Q523,Q524	2201472,	* 2SA1302-R,
	2201473,	* 2SA1302-O,
	2202812 or	* 2SA1943-R or
	2202813	* 2SA1943-O
Q525,Q526	2214984 or	2SC2631-R or
Q625,Q626	2214985	2SC2631-S
Q527,Q528	2214974 or	2SA1123-R or
Q627,Q628	2214975	2SA1123-S
Q572,Q703	2213510 or	DTA114ES or
	2214350	RN2202
Q573-Q576	2213631 or	RN1241-A or
	2213632	RN1241-B
Q591-Q594	2213284 or	2SC1740S-R or
Q615,Q616	2212115	2SC2458-GR
Q621,Q622	2202882,	* 2SD2387-R,
	2202883,	* 2SD2387-O,
	2202903,	* 2SD2389-O,
	2202904 or	* 2SD2389-Y or
	2202906	* 2SD2389-P
Q623,Q624	2202872,	* 2SB1558-R,
	2202873,	* 2SB1558-O,
	2202893,	* 2SB1559-O,
	2202894 or	* 2SB1559-Y or
	2202896	* 2SB1559-P
Q671,Q672	2211732 or	2SC1845-F or
	2211733	2SC1845-E
Q673	2211792 or	2SA992-F or
	2211793	2SA992-E
Q702	221282 or	DTC144ES or
	2213560	RN1204
Q926	2211455	2SA1015-GR
Q927	2211255	2SC1815-GR
Q928	2213640 or	DTC123JS or
	2214660	RN1205

CIRCUIT NO.	PART NO.	DESCRIPTION
	Diodes	
D503,D504	22380012F	HER303F
D505,D506	223205,	1SS270A,
D571-D574	223163 or	1SS133 or
D591-D594	223222	WG713A
D603,D604	22380012F	HER303F
D605,D606	223205,	1SS270A,
D701-D705	223163 or	1SS133 or
D930,D931	223222	WG713A
D706	224470562	MTZJ5.6B
D911,D912	22380274,	RS603M,
	22380038 or	RBV602 or
	22380070	D5SBA60
D921-D928	22380046 or	AM01Z or
D934	22380035	GP104003E
D929	224473604	MTZJ36D
D932	224470623	MTZJ6.2C
D933	223205,	1SS270A,
	223163 or	1SS133 or
	223222	WG713A
	Coils	
L501,L502	231176S	S-1.3C
L601,L602	231176S	S-1.3C
L701	233454K220	NCH-1452 220K
	Capacitors	
C265,C935	354741009	10μF,16V,Elect.
C303,C304	354741009	10μF,16V,Elect.
C307,C308	354721019	100μF,6.3V,Elect.
C309,C310	374726824	6800pF±5%,50V,Plastic
C311,C312	374721824	1800pF±5%,50V,Plastic
C313,C314	354741009	10μF,16V,Elect.
C315,C316	354744709	47μF,16V,Elect.
C523,C524	354741019	100μF,16V,Elect.
C525,C526	374721044	0.1μF±5%,50V,Plastic
C531,C532	354764709	47μF,35V,Elect.
C533,C534	374724734	0.047μF±5%,50V,Plastic
C535,C536	374721044	0.1μF±5%,50V,Plastic
C537,C538	354741019	100μF,16V,Elect.
C571-C573	354741009	10μF,16V,Elect.
C623,C624	354741019	100μF,16V,Elect.
C633,C634	374724734	0.047μF±5%,50V,Plastic
C637,C638	354741019	100μF,16V,Elect.
C671	354722219	220μF,6.3V,Elect.
C701	3000076 or	EECS5R5T104 or
	3000078	DX-5R5L104,Super
C702,704,710	354721019	100μF,6.3V,Elect.
C703	375524744	0.47μF±5%,50V,Plastic
C705,C709	354741009	10μF,16V,Elect.
C913,C914	375521044	0.1μF±5%,50V,Plastic <P>
C915,C916	3504259	12000μF,71V,Elect.
C923	354754729	4700μF,25V,Elect.
C924	354761029	1000μF,35V,Elect.
C927,C928	354741009	10μF,16V,Elect.
C931,C932	354741009	10μF,16V,Elect.
C933	354751029	1000μF,25V,Elect.
C936	354762219	220μF,35V,Elect.
C937	354782219	220μF,50V,Elect.
C940	354754719	470μF,25V,Elect.
C944	354761019	100μF,35V,Elect.

NOTE: <D>:120 V model only
<P>:230 V model only
<W>:Worldwide model only

CIRCUIT NO.	PART NO.	DESCRIPTION
	Resonator	
X701	3010239Y	CST10.0MTW
	Resistors	
R541,R542	443521014	100 Ohm±5%, 1/2W, Metal oxide
R543,R544	4000132	RGC55 0.22OHMK,Metal plate
R549-R552	453630474	4.7 Ohm±5%, 1W, Metal
R553,R554	443523924	3.9 kohm±5%, 1/2W, Metal oxide
R559,R560	453530824	8.2 Ohm±5%, 1/2W, Metal
R567,R568	453530104	1 Ohm±5%, 1/2W, Metal
R569,R570	443521014	100 Ohm±5%, 1/2W, Metal oxide
R643,R644	4000132	RGC55 0.22OHMK,Metal plate
R649,R650	453630824	8.2 Ohm±5%, 1W, Metal
R653,R654	443523324	3.3 kohm±5%, 1/2W, Metal oxide
R659,R660	453530824	8.2 Ohm±5%, 1/2W, Metal
R923	453530104	1 Ohm±5%, 1/2W, Metal
R924	453530824	8.2 Ohm±5%, 1/2W, Metal
R925,R926	443621204	12 Ohm±5%, 1W, Metal oxide
R927	453530824	8.2 Ohm±5%, 1/2W, Metal
R928	443621804	18 Ohm±5%, 1W, Metal oxide
R929,R930	443621514	150 Ohm±5%, 1W, Metal oxide
R931	443522204	22 Ohm±5%, 1/2W, Metal oxide
R934	443523314	330 Ohm±5%, 1/2W, Metal oxide
R935	443522204	22 Ohm±5%, 1/2W, Metal oxide
R938	453530104	1 Ohm±5%, 1/2W, Metal
	Relaies	
RL501-RL503	25065339 or	NRL-2P5A-DC24-046 or
	25065517Y	NRL-2P5A-DC24-098
RL911	25065339	NRL-2P5A-DC24-046
	Plugs	
P201a	25055652	NPLG-14P608 <D/W>
	25055653	NPLG-16P609 <P>
P321a	25055133	NPLG-3P117
P535,P536	25055038	NPLG-2P29
P601a	25055651	NPLG-12P607
P602a	25055654	NPLG-18P610
P603a	25055652	NPLG-14P608
P635,P636	25055038	NPLG-2P29
	Terminals	
P301-P303	25045300 or	NPJ-6PDBL159 or
	25045458	NPJ-6PDBL279
P304	25045303 or	NPJ-4PDBL162 or
	25045460	NPJ-4PDBL281
P501	25060244 or	NTM-8PDMN164 or
	25060125	NTM-8PDMN058,Speaker
	Wire clamper	
P921	260224	CP-1S
	Wire holders	
JL251a	25051095	NSCT-11P882
JL501a	25051108	NSCT-4P895
JL502a	25051088	NSCT-4P875
JL503a,JL801a	25051087	NSCT-3P874
JL702a	25051093	NSCT-9P880
JL911a	25051113	NSCT-9P900
JL921a	25051109	NSCT-5P896
	Wire traps	
JL401b	25055630	NPLG-9P592
JL701a	25050980 or	NSCT-40P767 or
	25051306	NSCT-40P1095

SECONDARY CIRCUIT PC BOARD (NAETC-5769-1A/1B/1D/1E/1F)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Resistors	
R921,R922	453534794	0.47 Ohm±5%,1/2W, Metal
R941	453534794	0.47 Ohm±5%,1/2W, Metal
	Wire holders	
JL911b	25051113	NSCT-9P900
JL921b	25051109	NSCT-5P896

DISPLAY CIRCUIT PC BOARD (NADIS-5770-1A/1B/1C)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Remote sensor	
U1701	24130011	PIC-12043TE2
	FL tube	
Q1701	212138	13-BT-138GK
	ICs	
Q1702	22240685R9	M66004FP
Q801	22240293 or	NJM4558L-D or
Q807-Q809	22240247	BA15218N
Q802	22241013	AK5340B
Q803	22240831R3	XC56004FJ50
Q804	22240720 or	LH2464-10 or
	22240867	LC3246P-80
Q805,Q806	22240832R9	SM5875BM
	Transistors	
Q811	2213284 or	2SC1740S-R or
Q1704,Q1705	2212115	2SC2458-GR
Q1703	221282 or	DTC144ES or
	2213560	RN1204
	LEDs	
D1701,D1702	225291D	SEL4910D-D
	Diodes	
D801	223205,	1SS270A,
D1703,D1711	223163 or	1SS133 or
D1713,D1714	223222	WG713A
D802	22380046 or	AM01Z or
	22380035	GP104003E
D803	224470562	MTZJ5.6B
D961	223205,	1SS270A,
	223163 or	1SS133 or
	223222	WG713A <P>
D1712	224471303	MTZJ13C
	Core	
L801	230906	BL02RN2-R62
	Coils	
L802,L803	233454K220	NCH-1452 220K
L811	233454K220	NCH-1452 220K
L818-L820	233454K220	NCH-1452 220K
	Resonator	
X801	3010112	KD6586FFB
	Capacitors	
C1702,C1711	353741009	10μF,16V,Elect.
C1714	375524744	0.47μF±5%,50V,Plastic
C1716	353781009	10μF,50V,Elect.
C1717	353721019	100μF,6.3V,Elect.
C1718,C1719	375524744	0.47μF±5%,50V,Plastic
C801,C802	353741009	10μF,16V,Elect.
C807,C808	374721024	1000pF±5%,50V,Plastic
C809,C815	353741009	10μF,16V,Elect.
C811,C818	353721019	100μF,6.3V,Elect.

SCHEMATIC DIAGRAM 1/6

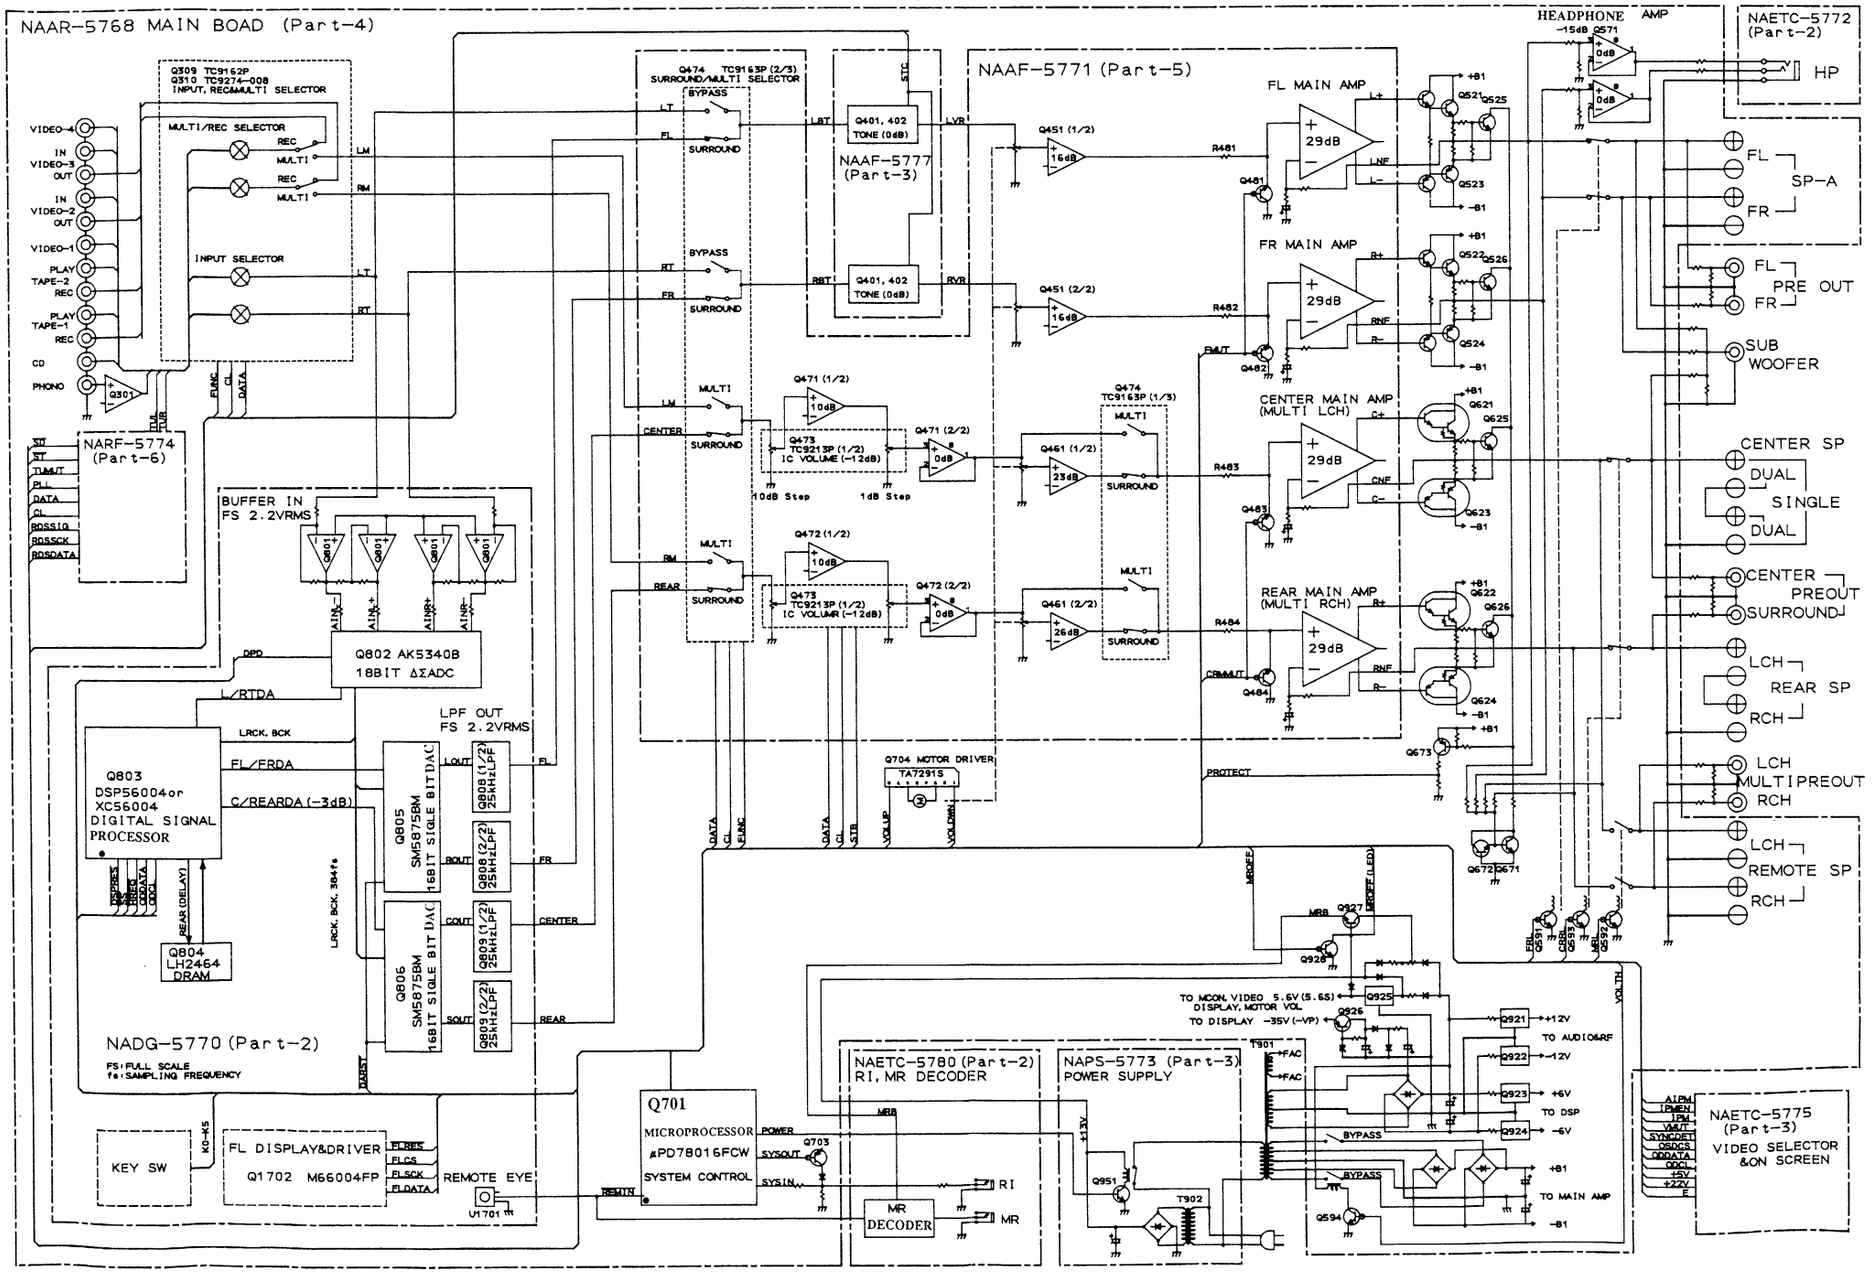

SCHEMATIC DIAGRAM 2/6

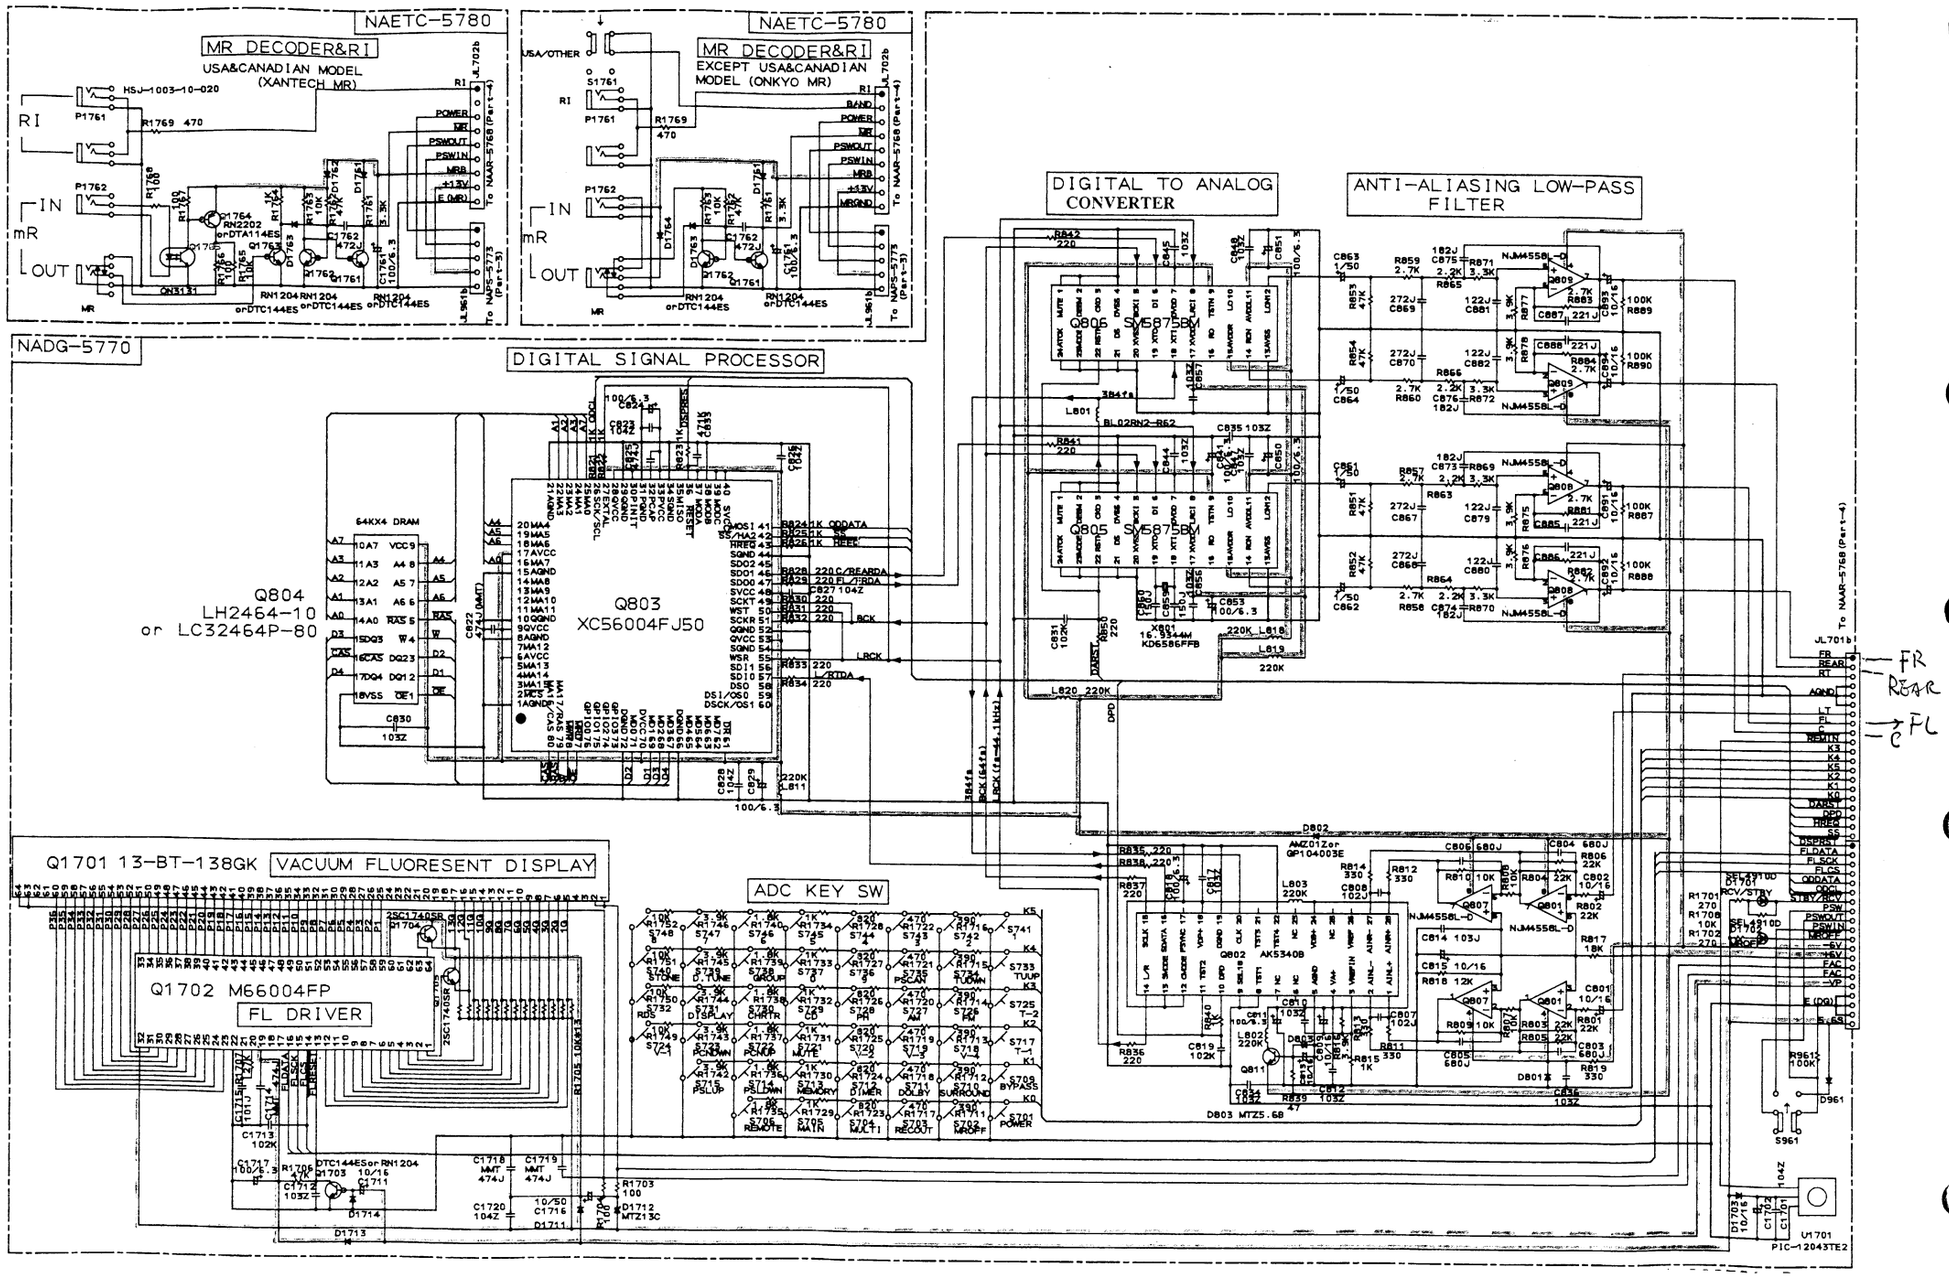

SCHEMATIC DIAGRAM 3/6

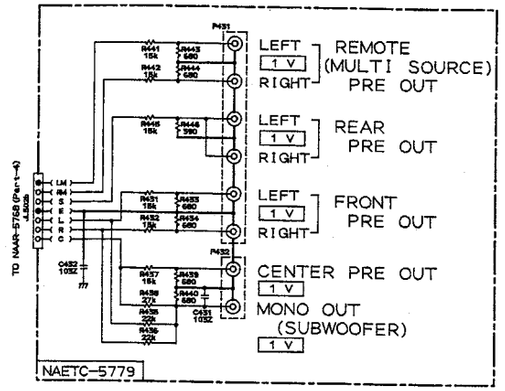

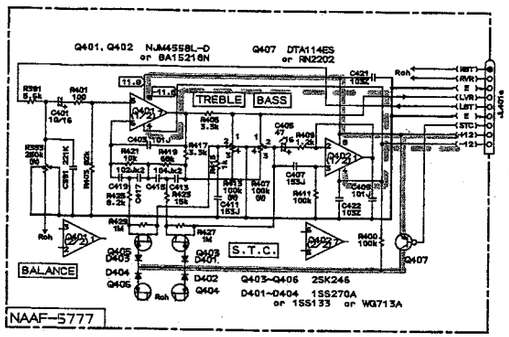

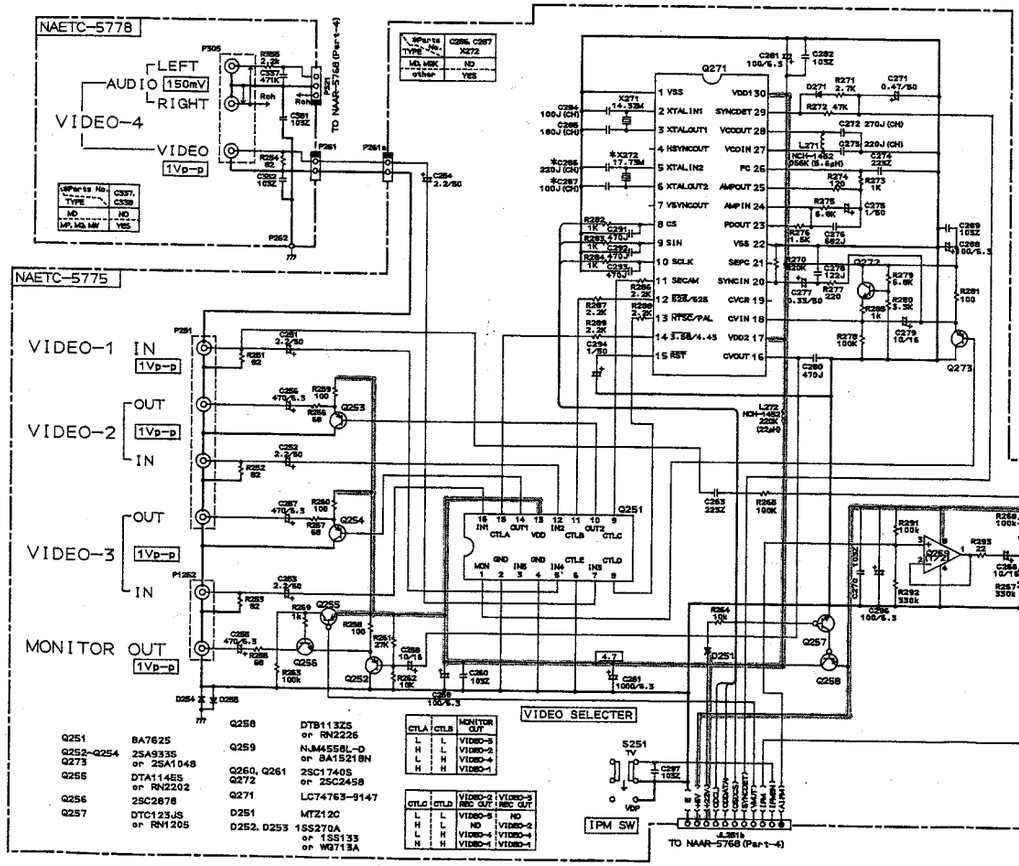

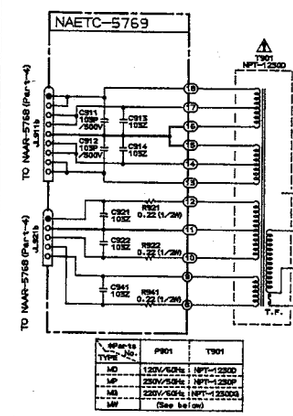

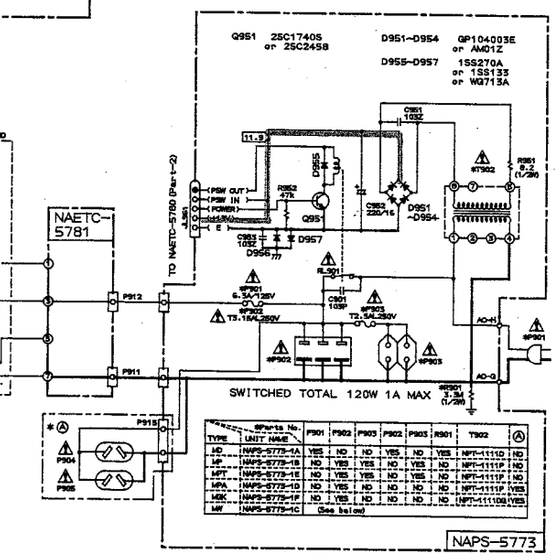

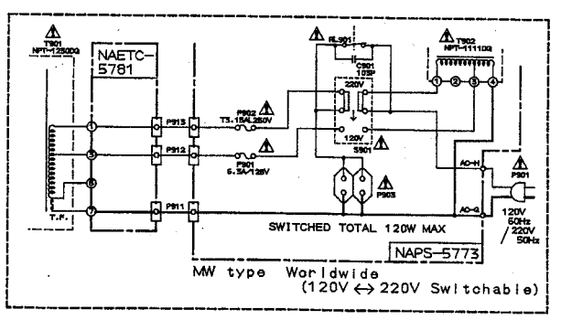

SCHEMATIC DIAGRAM 4/6

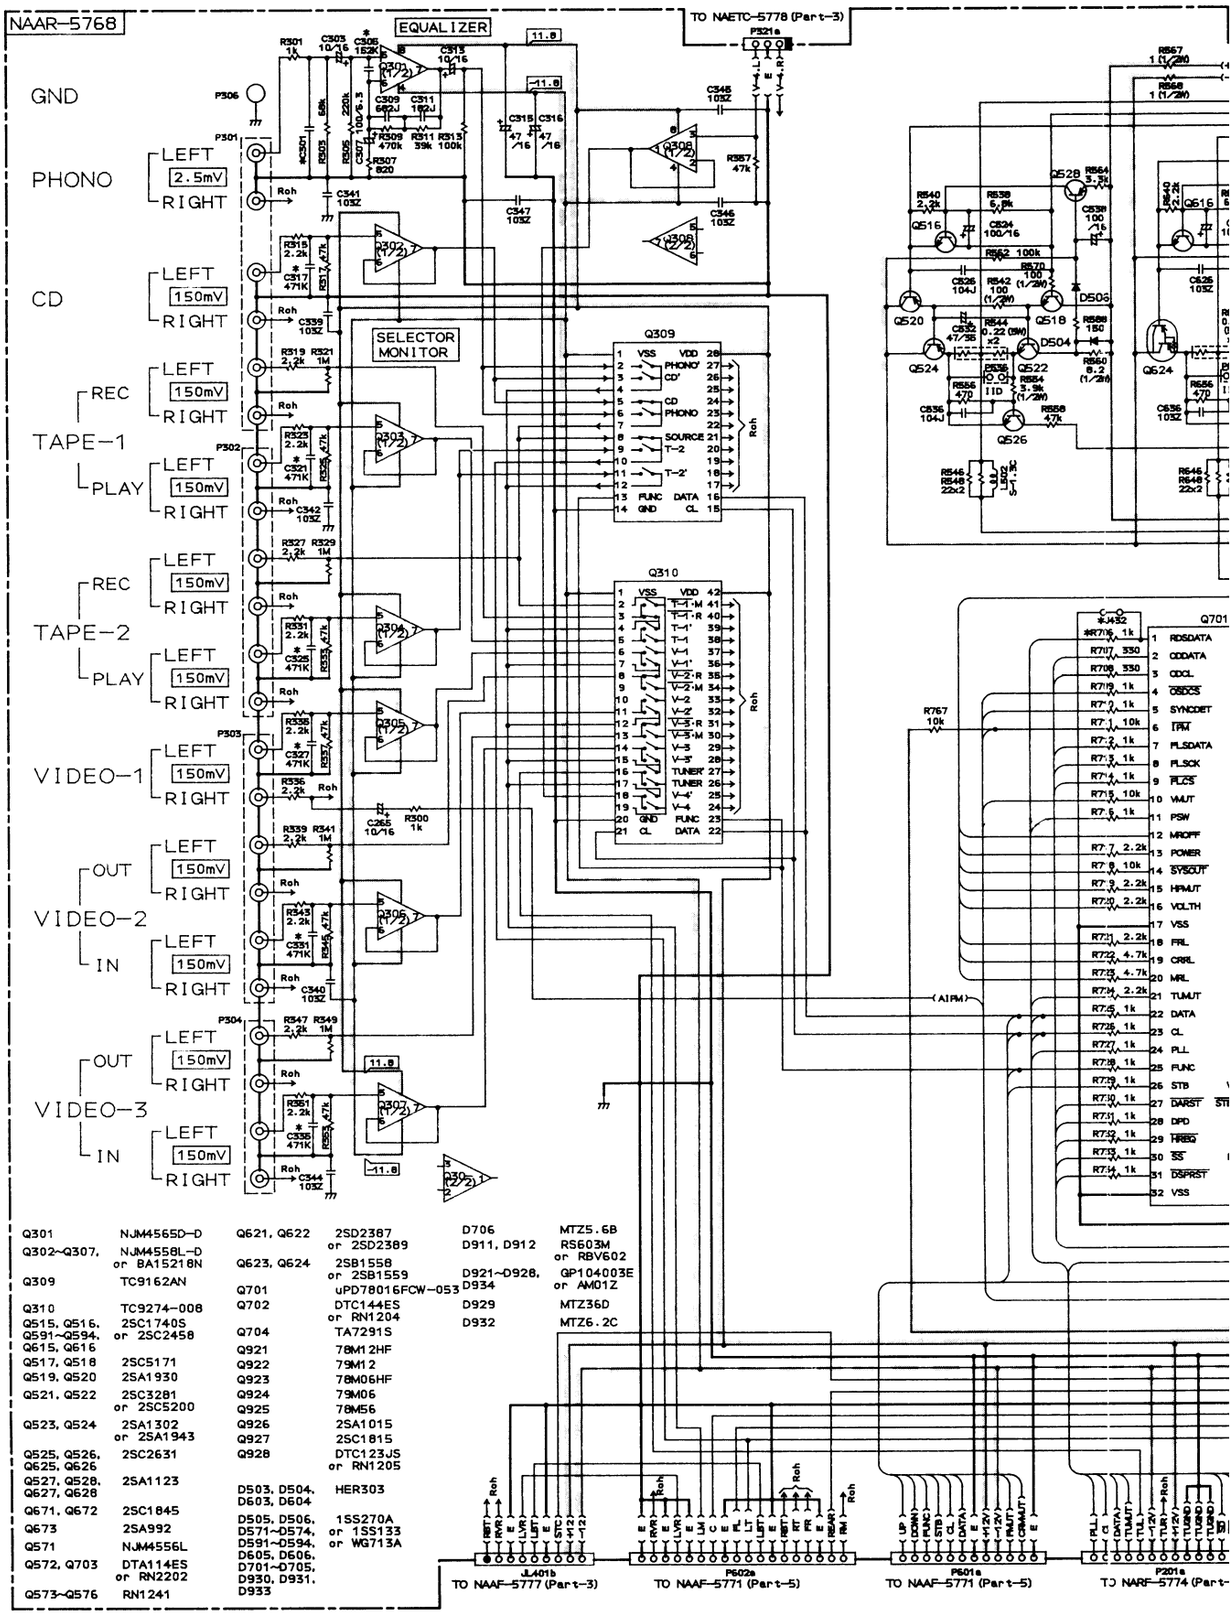

Q301	NJM4565D-D	Q621, Q622	2SD2387 or 2SD2389	D706	MTZ5.6B
Q302~Q307,	NJM4558L-D or BA15218N	Q623, Q624	2SB1558 or 2SB1559	D911, D912	RS603M or RBV602
Q309	TC9162AN	Q701	uPD78016FCW-053	D921~D928, D934	GP104003E or AM01Z
Q310	TC9274-008	Q702	DTC144ES or RN1204	D929	MTZ36D
Q515, Q516, Q591~Q594, Q615, Q616	2SC1740S or 2SC2458	Q704	TA7291S	D932	MTZ6.2C
Q517, Q518	2SC5171	Q921	78M12HF		
Q519, Q520	2SA1930	Q922	79M12		
Q521, Q522	2SC3281 or 2SC5200	Q923	78M06HF		
Q523, Q524	2SA1302 or 2SA1943	Q924	79M06		
Q525, Q526, Q625, Q626	2SC2631	Q925	78M56		
Q527, Q528, Q627, Q628	2SA1123	Q926	2SA1015		
Q671, Q672	2SC1845	Q927	2SC1815		
Q673	2SA992	Q928	DTC123JS or RN1205		
Q571	NJM4556L	D503, D504, D603, D604	HER303		
Q572, Q703	DTA114ES or RN2202	D505, D506, D571~D574, D591~D594, D605, D606, D701~D705, D930, D931, D933	1SS270A or 1SS133 or WG713A		
Q573~Q576	RN1241				

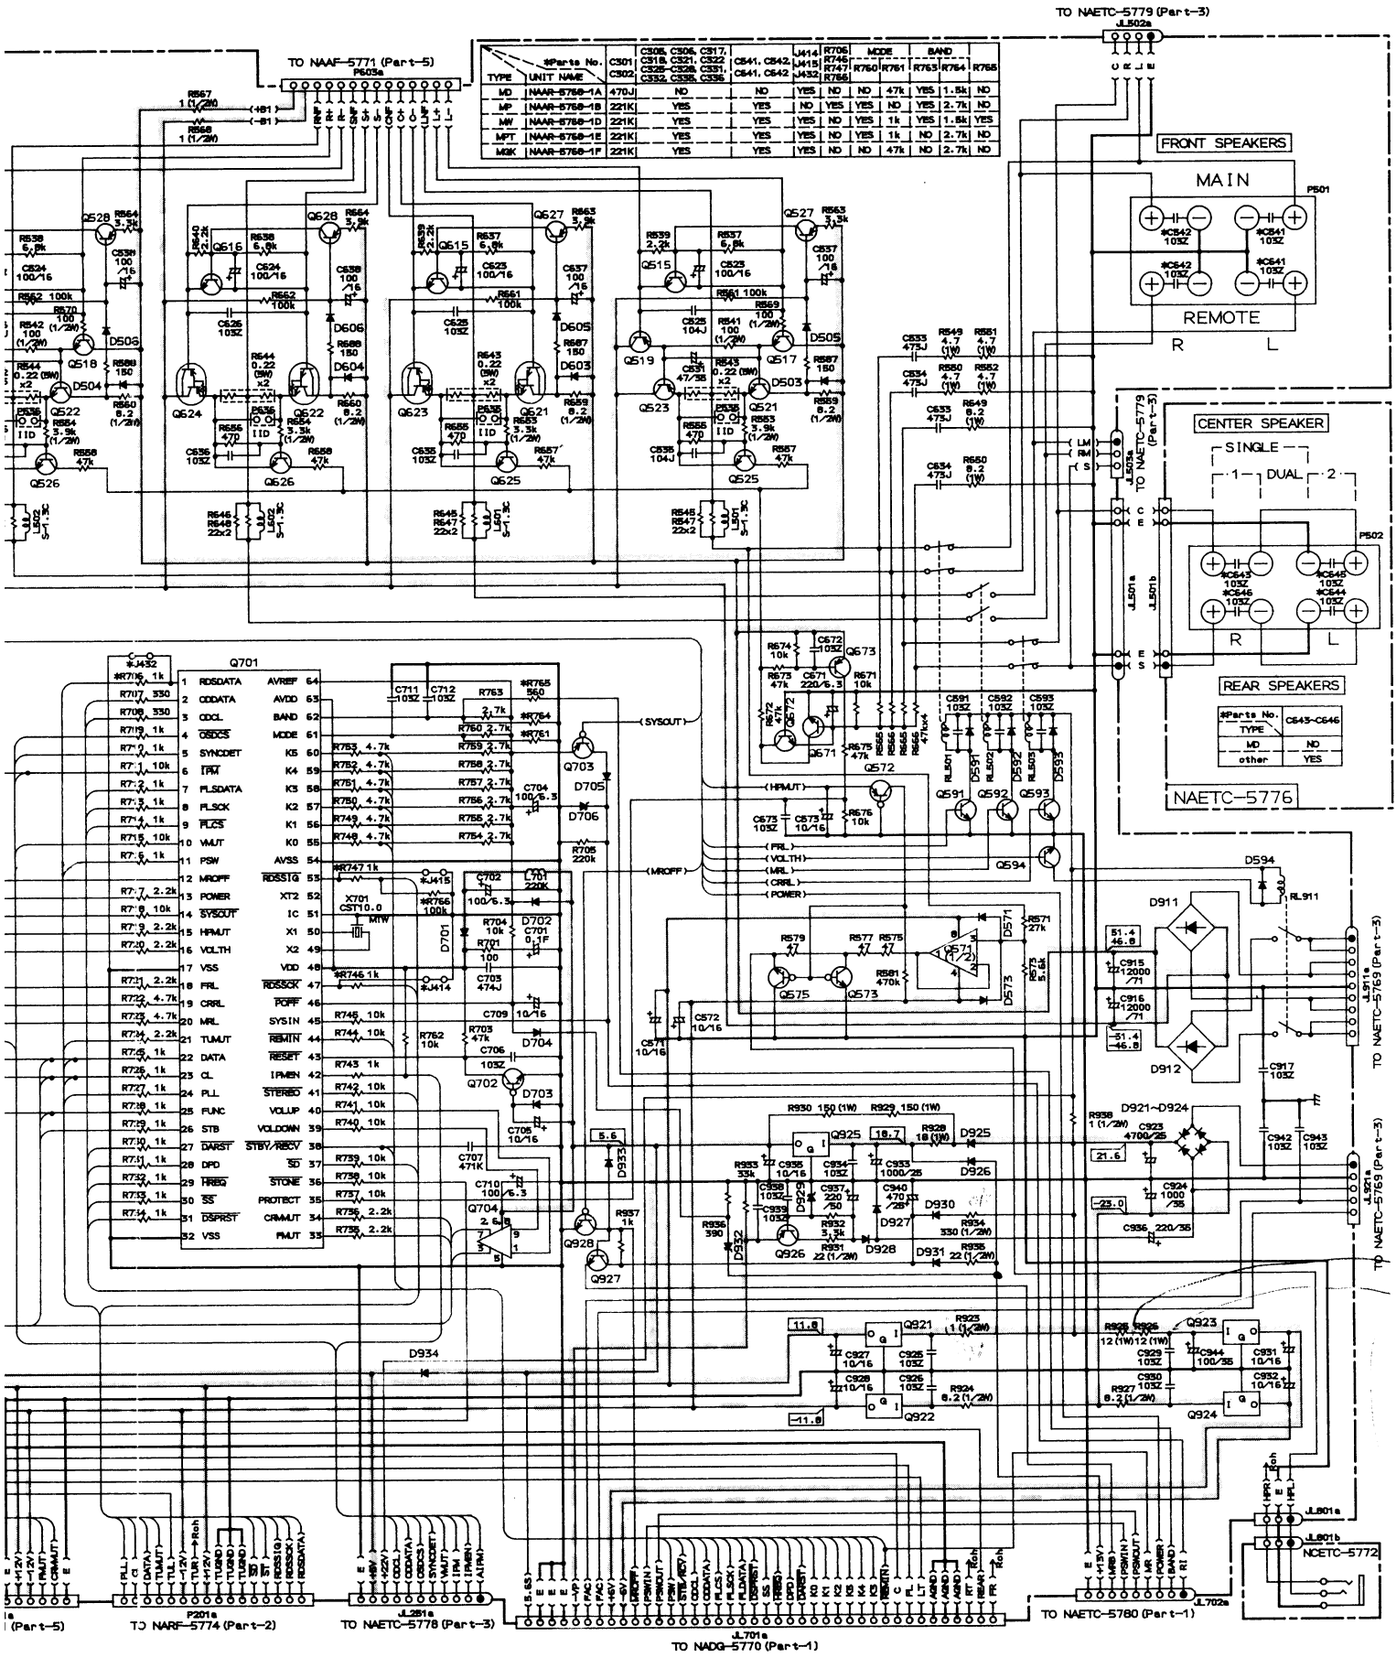
D
E
F
G
TO NAAF-5771 (Part-5)
TO NAETC-5779 (Part-3)
FRONT SPEAKERS
MAIN
REMOTE
CENTER SPEAKER
SINGLE
DUAL
REAR SPEAKERS
NAETC-5776
Q701
TO NAETC-5780 (Part-1)
TO NADG-5770 (Part-1)
TO NAETC-5778 (Part-3)
TO NARF-5774 (Part-2)
NCETC-5772

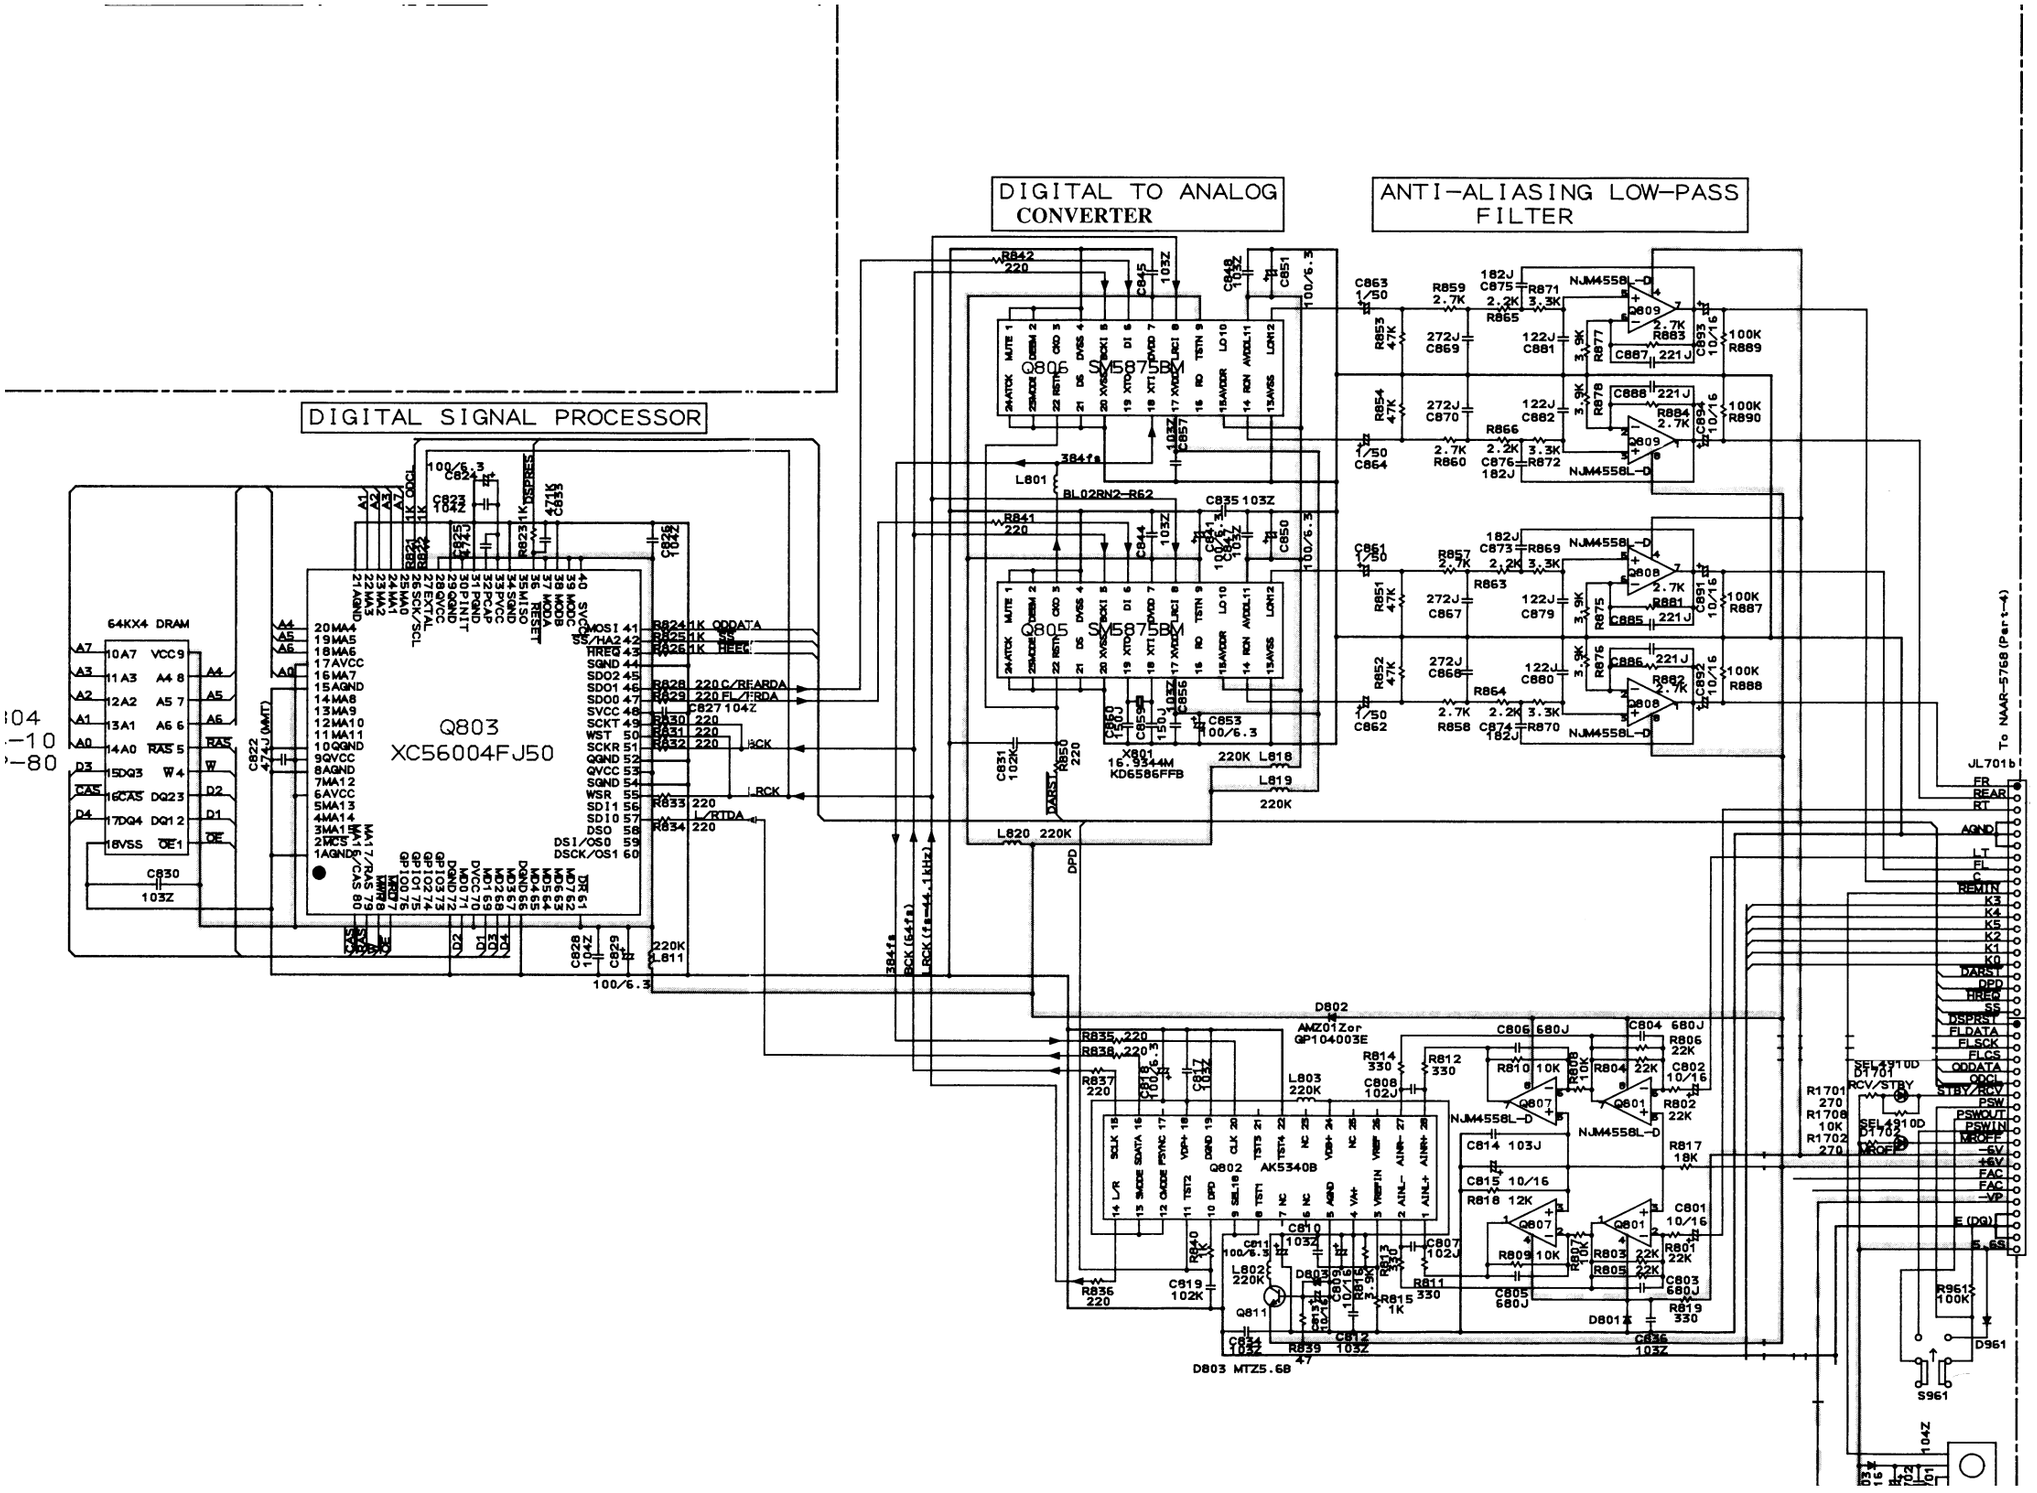
DIGITAL SIGNAL PROCESSOR
DIGITAL TO ANALOG CONVERTER
ANTI-ALIASING LOW-PASS FILTER
Q803
XC56004FJ50
64KX4 DRAM
Q806 SM5875UBM
Q805 SM5875UBM
Q802 AK5340B
D802
AMZ01Zor
GP104003E
D803 MTZ5.6B
X801
16.9344M
KD6586FFB
L801
BL02RN2-R62
L802 220K
L803 220K
L811 220K
L818 220K
L819 220K
L820 220K
NJM4558L-D
JL701b
To NAAR-5768 (Part-4)
SEL4910D
D961
S961

PRINTED CIRCUIT BOARD-PARTS LIST

NOTE: <D>:120 V model only
<P>:230 V model only
<W>:Worldwide model only

CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitors	
C814	374721034	0.01 μ F±5%,50V,Plastic
C820,C821	353721019	100 μ F,6.3V,Elect.
C822,C825	374724744	0.47 μ F±5%,50V,Plastic
C824	353721019	100 μ F,6.3V,Elect.
C829,C841	353721019	100 μ F,6.3V,Elect.
C850,C853	353721019	100 μ F,6.3V,Elect.
C861-C864	353780109	1 μ F,50V,Elect.
C867-C870	374722724	2700pF±5%,50V,Plastic
C873-C876	374721824	1800pF±5%,50V,Plastic
C879-C882	374721224	1200pF±5%,50V,Plastic
C885-C888	370132214	220pF±5%,100V,APS
C891-C894	353741009	10 μ F,16V,Elect.
	Resistor	
R1705	49163103413	10k×13 RM1/101J, Array
	Push switches	
S701	25035652	NPS-111-S604 <D/W>
S702-S706	25035652	NPS-111-S604
S709-S715	25035652	NPS-111-S604
S717-S729	25035652	NPS-111-S604
S730-S732	25035652	NPS-111-S604 <P>
S733-S748	25035652	NPS-111-S604
S961	25035653	⚠ NPS-122-L605 <P>
	Holder	
Q1701a	27190913Y	
	Wire holders	
JL701b	25050946	NSCT-40P733
JL801b	25051087	NSCT-3P874

MASTER VOLUME CIRCUIT PC BOARD (NAAF-5771-1A/1B/1C)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q451,Q461	22240293 or	NJM4558L-D or
Q471,Q472	22240247	BA15218N
Q473	22240266	TC9213P
Q474	22240799	TC9163AN
	Transistors	
Q481-Q484	2213631 or	RN1241-A or
	2213632	RN1241-B
Q491,Q492	2213510 or	DTA114ES or
	2214350	RN2202
Q501-Q504	2211732 or	* 2SC1845-F or
Q601-Q604	2211733	* 2SC1845-E
Q505,Q506	2213354 or	2SA933S-R or
Q605,Q606	2212125	2SA1048-GR
Q507,Q508	2211732 or	2SC1845-F or
Q607,Q608	2211733	2SC1845-E
Q509,Q510	2213284 or	2SC1740S-R or
Q609,Q610	2212115	2SC2458-GR
Q511,Q512	2211353 or	2SA949-O or
Q611,Q612	2211354	2SA949-Y
Q513,Q514	2211633 or	2SC2229-O or
Q613,Q614	2211634	2SC2229-Y
	Diodes	
D491,D492	223205,	1SS270A,
D501,D502	223163 or	1SS133 or
D601,D602	223222	WG713A

CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitors	
C451,C452	354780229	2.2 μ F,50V,Elect.
C457-C460	354741009	10 μ F,16V,Elect.
C461,C462	354780229	2.2 μ F,50V,Elect.
C467-C470	354741009	10 μ F,16V,Elect.
C471,C472	354780229	2.2 μ F,50V,Elect.
C475,C476	354741009	10 μ F,16V,Elect.
C477,C478	354780229	2.2 μ F,50V,Elect.
C479,C480	354741009	10 μ F,16V,Elect.
C491,C492	354741009	10 μ F,16V,Elect.
C495-C498	354741009	10 μ F,16V,Elect.
C501,C502	354781009	10 μ F,50V,Elect.
C503,C504	374724714	470pF±5%,50V,Plastic
C507,C508	354742219	220 μ F,16V,Elect.
C511,C512	374722224	2200pF±5%,50V,Plastic
C513,C514	354721019	100 μ F,6.3V,Elect.
C519-C522	354700109	1 μ F,160V,Elect.
C601,C602	354781009	10 μ F,50V,Elect.
C607,C608	354742219	220 μ F,16V,Elect.
C613,C614	354721019	100 μ F,6.3V,Elect.
C619-C622	354700109	1 μ F,160V,Elect.
	Resistors	
R450	5104348AY or	N16RQL50KA25F,
	5104349AY	Variable
R527,R528	443522204	22 Ohm±5%,1/2W,Metal oxide
R529,R530	443528204	82 Ohm±5%,1/2W,Metal oxide
R531-R534	453530224	2.2 Ohm±5%,1/2W,Metal
R627,R628	443522204	22 Ohm±5%,1/2W,Metal oxide
R629,R630	443528204	82 Ohm±5%,1/2W,Metal oxide
R631-R634	453530224	2.2 Ohm±5%,1/2W,Metal
	Sockets	
P601	25050985	NSCT-12P772
P602	25050988	NSCT-18P775
P603	25050986	NSCT-14P773

HEADPHONE TERMINAL PC BOARD (NAETC-5772-1A/1B/1D/1E/1F)

CIRCUIT NO.	PART NO.	DESCRIPTION
JL801b	25051087	NSCT-3P874,Wire holder
P801	25045257	YKB26-5138,Headphone jack

PRIMARY CIRCUIT PC BOARD (NAPS-5773-1A/1B/1C/1E/1F)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistor	
Q951	2213284 or	2SC1740S-R or
	2212115	2SC2458-GR
	Diodes	
D951-D954	22380046 or	AM01Z or
	22380035	GP104003E
D955-D957	223205,	1SS270A,
	223163 or	1SS133 or
	223222	WG713A
	Power transformer	
T901	2300670AY	⚠ NPT-1111D <D>
	2300671AY	⚠ NPT-1111P <P>
	2300672Y	⚠ NPT-1111DG <W>
	Capacitors	
C901	3500191	⚠ DE7150FZ103M,IS
C952	354742219	220 μ F,16V,Elect.

CAUTION:Replacement of the transistor of mark *, if necessary, must be made from the same beta group (Hrz) as the original type.

NOTE: THE COMPONENTS IDENTIFIED BY MARK ⚠ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

CIRCUIT NO.	PART NO.	DESCRIPTION
	Resistors	
R901	431523355	⚠ 3.3 Mohm,1/2W,Solid <D>
R951	453530824	8.2 Ohm±5%,1/2W,Metal
	Plug	
P901a	25055675	NPLG-2P631 <D/P>
	Relay	
RL901	25065248 or	⚠ NRL-1P15A-DC12-29 or
	25065516	⚠ NRL-1P10A-DC12-097 <D/W>
	25065515 or	⚠ NRL-1P5A-DC12-096 or
	25065508	⚠ NRL-1P10A-DC12-093 <P>
	AC outlet	
P902	25051124	⚠ NSCT-6P911 <D>
P903	25051125	⚠ NSCT-4P912 <P/W>
	Fuseholders	
F901a	25050065	⚠ YSH403T <D/W>
F902a	25050065	⚠ YSH403T <P/W>
F903a	25050065	⚠ YSH403T <P>
	Fuse	
F901	252166Y	⚠ 6.3A-UL/T-237, Primary <D/W>
F902	252076	⚠ 3.15A-SE-EAK, Primary <P/W>
F903	252075	⚠ 2.5A-SE-EAK, AC outlet <P>
	Wire holder	
JL961a	25051089	NSCT-5P876
CIRCUIT NO.	**PART NO.**	**DESCRIPTION**
	Switch	
S901	25065437	⚠ NSS-22157P, Voltage selector <W>

VIDEO CIRCUIT PC BOARD (NAETC-5775-1A/1B/1C/1E/1F)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q251	22240373	BA7625
Q259	22240293 or	NJM4558L-D or
	22240247	BA15218N
Q271	22240968	LC74763-9147
	Transistors	
Q252-Q254	2213354 or	2SA933S-R or
Q273	2212125	2SA1048-GR
Q255	2213510 or	DTA114ES or
	2214350	RN2202
Q256	2212285 or	2SC2878-A or
	2212286	2SC2878-B
Q257	2213640 or	DTC123JS or
	2214660	RN1205
Q258	2213830 or	DTB113ZS or
	2214690	RN2226
Q260,Q261	2213284 or	2SC1740S-R or
	2212115	2SC2458-GR
Q272	2213284 or	2SC1740S-R or
	2212115	2SC2458-GR
	Diodes	
D251	224471203	MTZJ12C
D252-D255	223205,	1SS270A,
D271	223163 or	1SS133 or
	223222	WG713A
	Coils	
L271	233454K056	NCH-1452 056K
L272	233454K220	NCH-1452 220K
	Resonator	
X271	3010167	XTL-14.32M,Crystal
X272	3010238	XTL-17.73M <P/W>
	Capacitors	
C251-C254	354780229	2.2 μ F,50V,Elect.
C255-C257	354724719	470 μ F,6.3V,Elect.
C258	354741009	10 μ F,16V,Elect.
C259	354721019	100 μ F,6.3V,Elect.
C261	354721029	1000 μ F,6.3V,Elect.
C264,C266	354741009	10 μ F,16V,Elect.
C268.C269	354741009	10 μ F,16V,Elect.
C271	354784799	0.47 μ F,50V,Elect.
C274	375522234	0.022 μ F±5%,50V,Plastic
C275	354780109	1 μ F,50V,Elect.
C276	374726824	6800pF±5%,50V,Plastic
C277	354783399	0.33 μ F,50V,Elect.
C278	374721224	1200pF±5%,50V,Plastic
C279	354741009	10 μ F,16V,Elect.
C281,C288	354721019	100 μ F,6.3V,Elect.
C294	354780109	1 μ F,50V,Elect.
C296	354721019	100 μ F,6.3V,Elect.
	Switch	
S251	25065286	NSS-22112
	Terminals	
P251	25045339	NPJ-4PDYE190
P252	25045395	NPJ-2PDYE221
	Plug	
P261a	25055132	NPLG-2P116
	Wire trap	
JL251b	25055632	NPLG-11P594

SPEAKER TERMINAL PC BOARD (NAETC-5776-1A/1B/1C/1E/1F)

CIRCUIT NO.	PART NO.	DESCRIPTION
P503	25060244 or	NTM8PDMN164 or
	25060125	NTM8PDMN058,Speaker terminal
JL501b	25050268	NSCT-4P96, Wire trap

TONE CONTROL CIRCUIT PC BOARD (NAAF-5777-1A/1B/1C/1E/1F)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q401,Q402	22240293 or	NJM4558L-D or
	22240247	BA15218N
	Transistors	
Q403-Q406	2211945	2SK246-GR
Q407	2213510 or	DTA114ES or
	2214350	RN2202
	Diodes	
D401-D404	223205,	1SS270A,
	223163 or	1SS133 or
	223222	WG713A
	Resistors	
R393	5104225 or	N11RGLC250KW22Z or
	5104378Y	N11RGLC250KWT22Z,Variable
R407,R413	5104230 or	N14RLC100KWT22Z,Variable
	5104377	

SCHEMATIC DIAGRAM 5/6

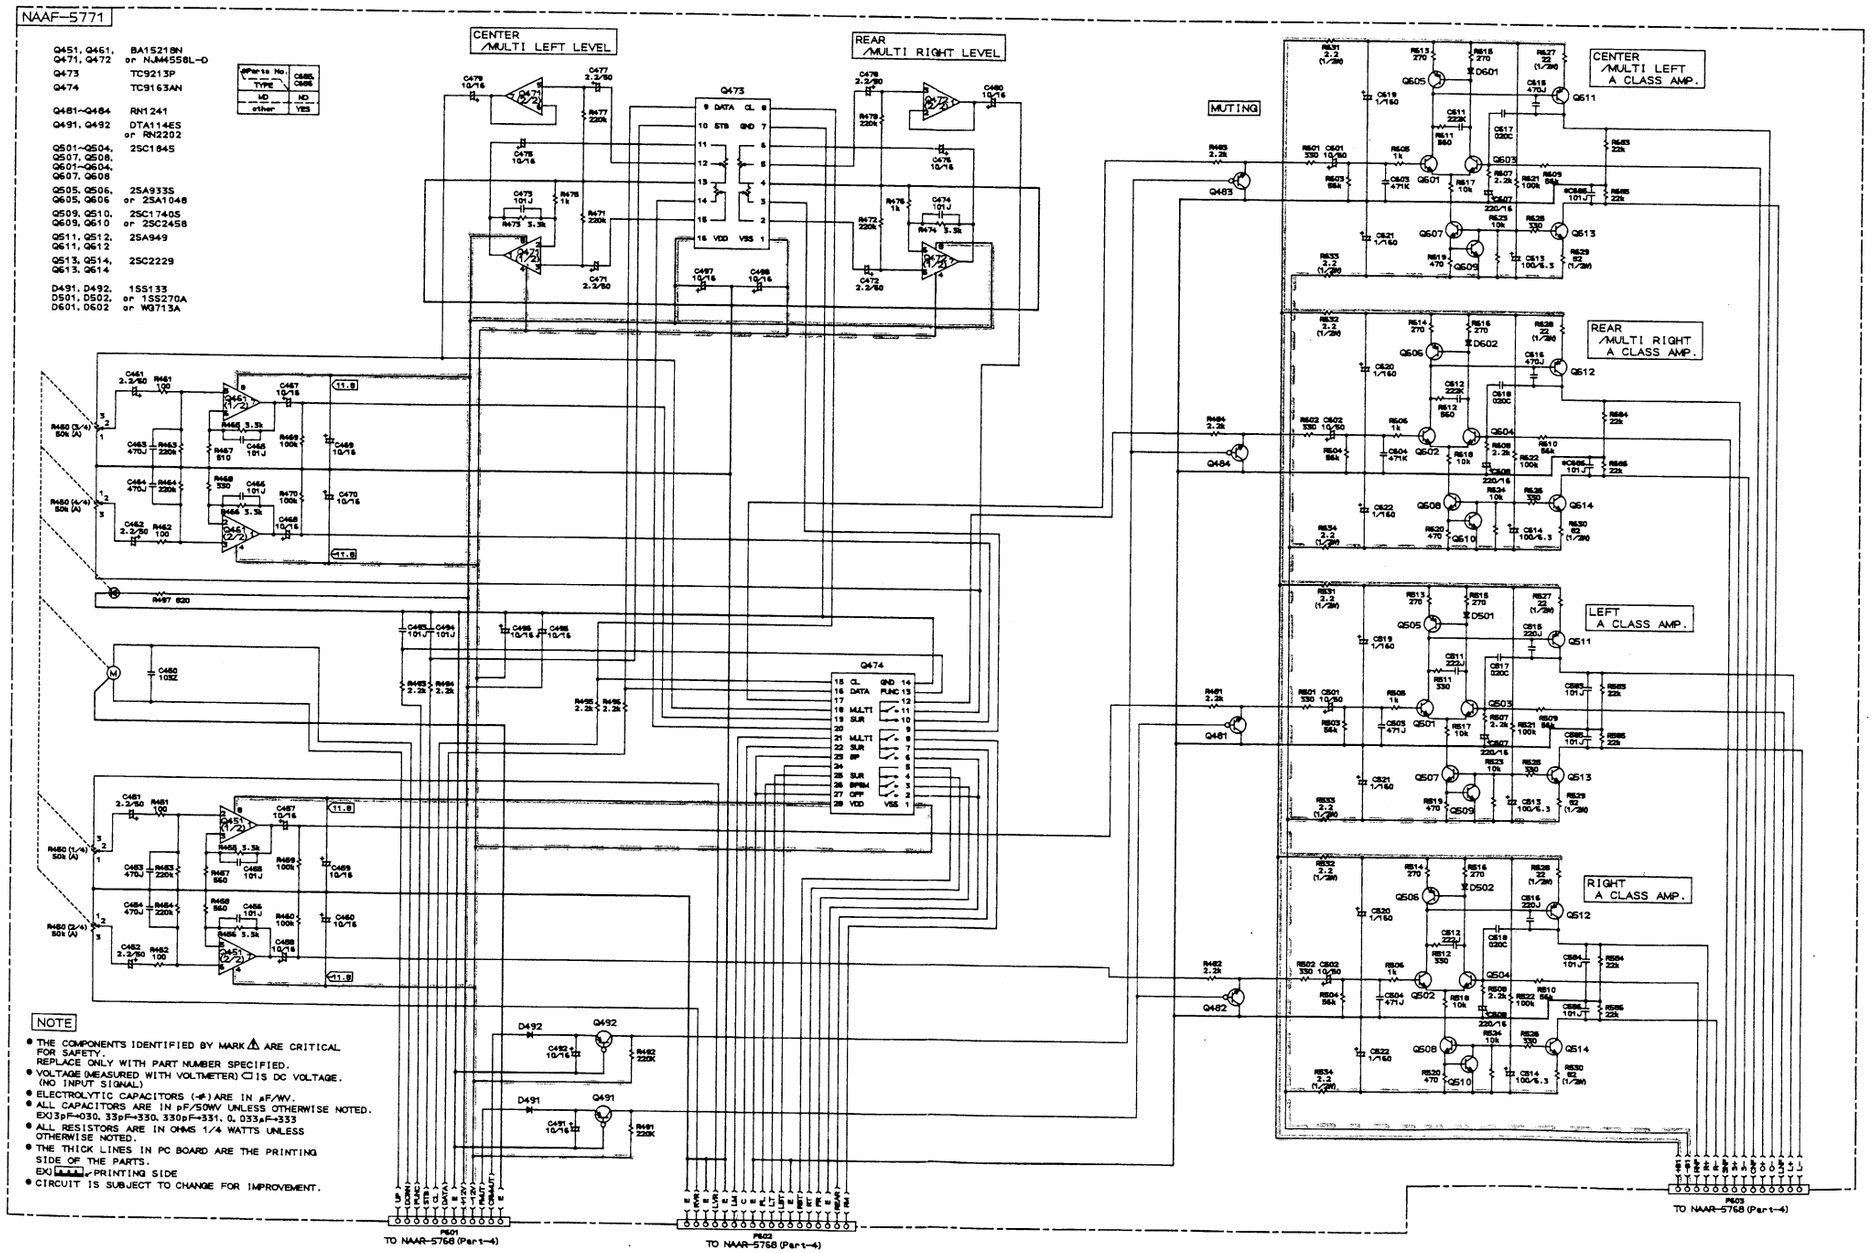
NAAF-5771
CENTER /MULTI LEFT LEVEL
REAR /MULTI RIGHT LEVEL
MUTING
CENTER /MULTI LEFT A CLASS AMP.
REAR /MULTI RIGHT A CLASS AMP.
LEFT A CLASS AMP.
RIGHT A CLASS AMP.
Q451, Q461, Q471, Q472 BA15218N or NJM4558L-D
Q473 TC9213P
Q474 TC9163AN
Q481~Q484 RN1241
Q491, Q492 DTA114ES or RN2202
Q501~Q504, Q507, Q508, Q601~Q604, Q607, Q608 2SC1845
Q505, Q506, Q605, Q606 2SA933S or 2SA1048
Q509, Q510, Q609, Q610 2SC1740S or 2SC2458
Q511, Q512, Q611, Q612 2SA949
Q513, Q514, Q613, Q614 2SC2229
D491, D492, D501, D502, D601, D602 1SS133 or 1SS270A or WG713A
NOTE
THE COMPONENTS IDENTIFIED BY MARK ⚠ ARE CRITICAL FOR SAFETY. REPLACE ONLY WITH PART NUMBER SPECIFIED.
VOLTAGE (MEASURED WITH VOLTMETER) ⊏ IS DC VOLTAGE. (NO INPUT SIGNAL)
ELECTROLYTIC CAPACITORS (-#) ARE IN μF/WV.
ALL CAPACITORS ARE IN pF/50WV UNLESS OTHERWISE NOTED. EX) 3pF=030, 33pF=330, 330pF=331, 0.033μF=333
ALL RESISTORS ARE IN OHMS 1/4 WATTS UNLESS OTHERWISE NOTED.
THE THICK LINES IN PC BOARD ARE THE PRINTING SIDE OF THE PARTS.
EX) PRINTING SIDE
CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.
P501 TO NAAR-5768 (Part-4)
P502 TO NAAR-5768 (Part-4)
P503 TO NAAR-5768 (Part-4)

SCHEMATIC DIAGRAM 6/6

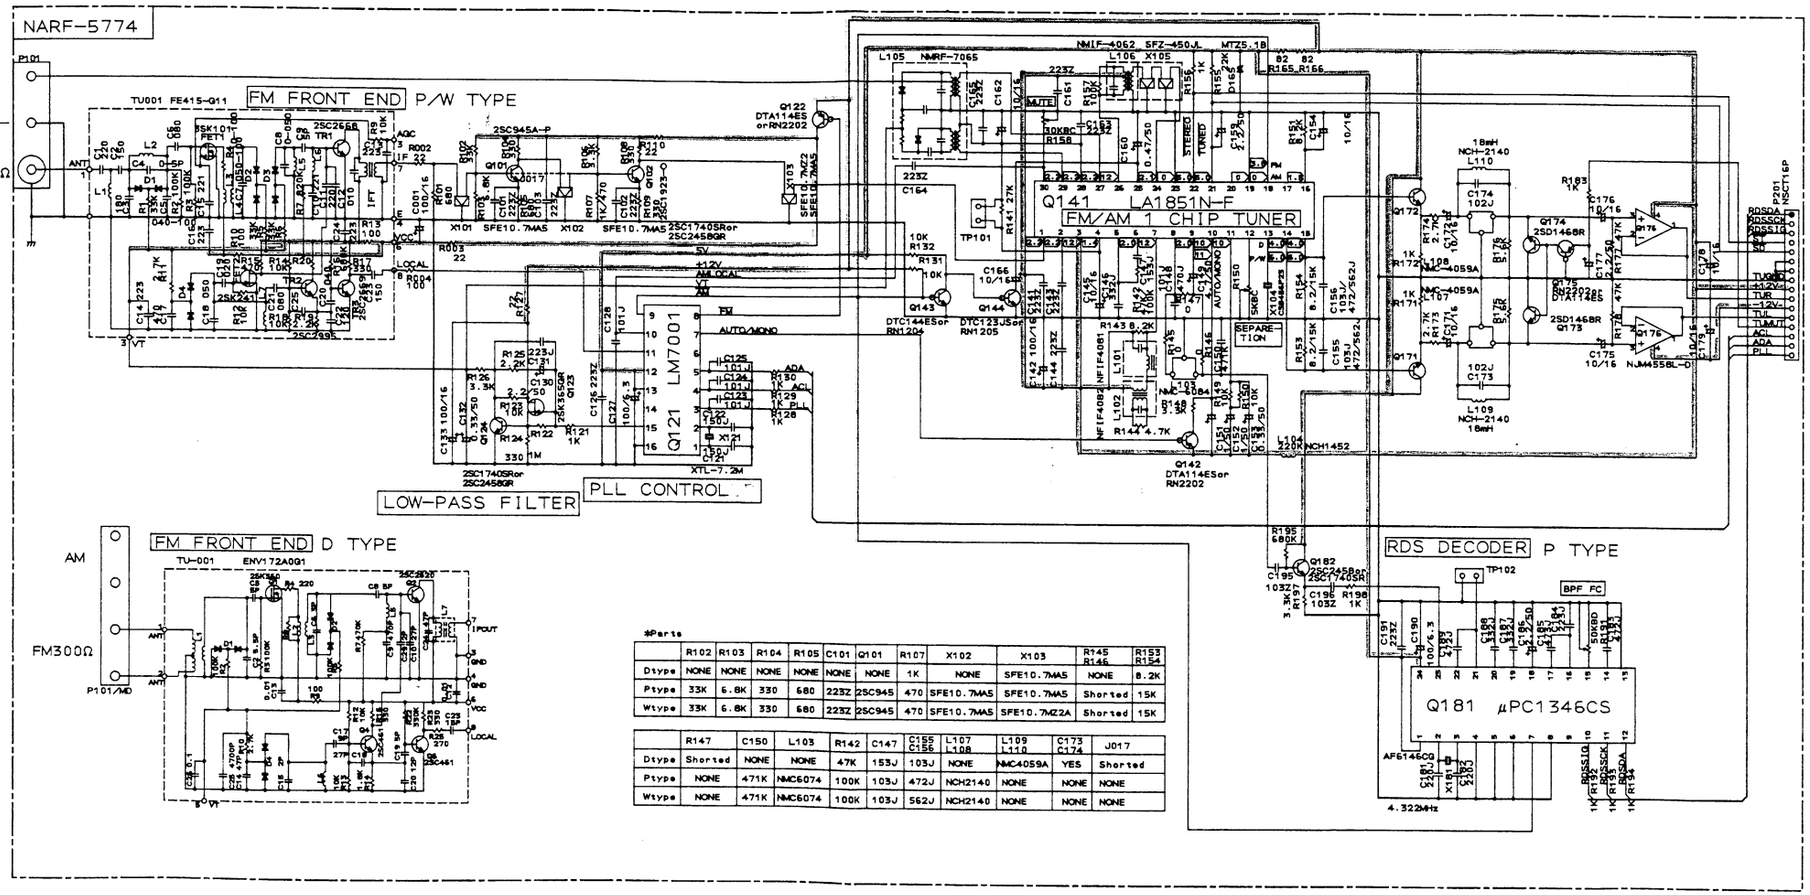

*Parts

	R102	R103	R104	R105	C101	Q101	R107	X102	X103	R145 R146	R153 R154
Dtype	NONE	NONE	NONE	NONE	NONE	NONE	1K	NONE	SFE10.7MA5	NONE	8.2K
Ptype	33K	6.8K	330	680	223Z	2SC945	470	SFE10.7MA5	SFE10.7MA5	Shorted	15K
Wtype	33K	6.8K	330	680	223Z	2SC945	470	SFE10.7MA5	SFE10.7MZ2A	Shorted	15K

	R147	C150	L103	R142	C147	C155 C156	L107 L108	L109 L110	C173 C174	J017
Dtype	Shorted	NONE	NONE	47K	153J	103J	NONE	NMC4059A	YES	Shorted
Ptype	NONE	471K	NMC6074	100K	103J	472J	NCH2140	NONE	NONE	NONE
Wtype	NONE	471K	NMC6074	100K	103J	562J	NCH2140	NONE	NONE	NONE

PRINTED CIRCUIT BOARD-PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
	Wire holder	
JL401a	25051093	NSCT-9P880
	Capacitors	
C401,C402	354741009	10 μ F,16V,Elect.
C405,C406	354744709	47 μ F,16V,Elect.
C407,C408	374721534	0.015 μ F±5%,50V,Plastic
C411,C412	374721534	0.015 μ F±5%,50V,Plastic
C413-C416	374721044	0.1 μ F±5%,50V,Plastic
C417-C420	374721024	1000pF±5%,50V,Plastic

FRONT TERMINAL PC BOARD (NAETC-5778-1A/1B/1C/1E/1F)

CIRCUIT NO.	PART NO.	DESCRIPTION
P261	2009990281	NSAS-4P0409,Socket
P305	25045402	NPJ-3PDBL227,Terminal
P321	2009990125	NSAS-6P0190,Socket

PRE. OUTPUT TERMINAL PC BOARD (NAETC-5779-1A/1B/1C/1E/1F)

CIRCUIT NO.	PART NO.	DESCRIPTION
P431	25045458 or	NPJ-6PDBL279 or
	25045300	NPJ-6PDBL159,Terminal
P432	25045456 or	NPJ-2PDBL277 or
	25045298	NPJ-2PDBL157,Terminal
JL502b	25055628	NPLG-7P590,Plug

MR/RI TERMINAL PC BOARD (NAETC-5780-1A/1B/1C/1E/1F)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q1761,Q1762	221282 or	DTC144ES or
	2213560	RN1204
Q1763	221282 or	DTC144ES or
	2213560	RN1204 <D>
Q1764	2213510 or	DTA114ES or
	2214350	RN2202 <D>
	Photo coupler	
Q1765	24120043	ON3131 <D>
	Diodes	
D1761,D1763	223205,	1SS270A,
	223163 or	1SS133 or
	223222	WG713A
D1762	223205,	1SS270A,
	223163 or	1SS133 or
	223222	WG713A <D>
D1764	223205,	1SS270A,
	223163 or	1SS133 or
	223222	WG713A <P/W>
	Capacitors	
C1761	354721019	100 μ F,6.3V,Elect.
C1762	374724724	4700pF±5%,50V,Plastic
	Terminals	
P1761	25045172	HSJ-1003-01-020,RI
P1762	25045433	HSJ-1003-01-013,XANTECH <D>
	25045293	HSJ-1003-01-012,MR <P/W>
	Wire trap	
JL702b	25055630	NPLG-9P592
	Wire holder	
JL961b	25051089	NSCT-5P876
	Switch	
S1761	25065286	NSS-22112, Band step <W>

TUNER CIRCUIT PC BOARD (NARF-5774-1A/1B/1C/1E/1F)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Front end	
TU001	240098Y	ENV172D1G1 <D>
	240089	FE415-G11 <P/W>
	ICs	
Q121	22240090	LM7001
Q141	22240983Y	LA1851N-F
Q176	22240293 or	NJM4558L-D or
	22240247	BA15218N
Q181	22240679	μ PC1346CS <P>
	Transistors	
Q101	2210746	2SC945A-P <P/W>
Q102	2211723	2SC1923-O
Q122,Q142	2213510 or	DTA114ES or
Q175	2214350	RN2202
Q123	2212445	2SK365-GR
Q124	2213284 or	2SC1740S-R or
Q171,Q172	2212115	2SC2458-GR
Q143	221282 or	DTC144ES or
	2213560	RN1204
Q144	2213640 or	DTC123JS or
	2214660	RN1205
Q173,Q174	2212794	2SD1468-R
Q182	2213284 or	2SC1740S-R or
	2212115	2SC2458-GR <P>
	Diode	
D165	224470512	MTZJ5.1B
	Transformers	
L101	233457Y	NFIF-4081
L102	233458Y	NFIF-4082
L106	232139	NMIF-4062
	Coils	
L103	233471Y	NMC-6084 <P/W>
L104	233454K220	NCH-1452 220K
L107,L108	233355A	NMC-4059 <P/W>
L109,L110	231092	NCH-2140 <D>
	RF block	
L105	232163A	NMRF-7065
	Resonators	
X104	3010268Y	CSB456F23,Ceramic
X121	3010141	XTL-7.2M,Crystal
X181	3010203	AF6146CG <P>
	Ceramic filters	
X101	3010071	SFE10.7MA5
X102	3010071	SFE10.7MA5 <P/W>
X103	3010071	SFE10.7MA5 <D>
	3010130	SFE10.7MZ2A <P/W>
X105	3010123	SFZ450JL
	Capacitors	
C001	354741019	100 μ F,16V,Elect.
C127	354721019	100 μ F,6.3V,Elect.
C130	354780229	2.2 μ F,50V,Elect.
C131	374722234	0.022 μ F±5%,50V,Plastic
C132	354783399	0.33 μ F,50V,Elect.
C133,C142	354741019	100 μ F,16V,Elect.
C145	354741009	10 μ F,16V,Elect.
C146	374723324	3300pF±5%,50V,Plastic
C147	374721534	0.015 μ F±5%,50V,Plastic <D>
	374721034	0.01 μ F±5%,50V,Plastic <P/W>

PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE

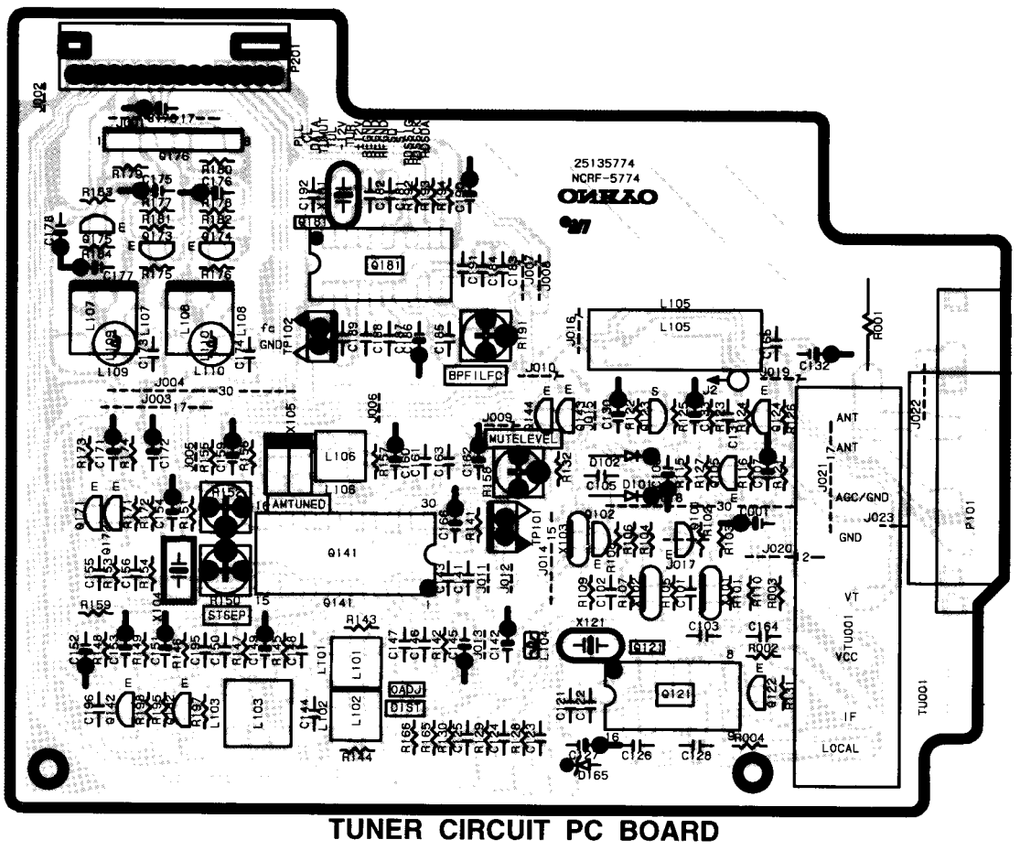

TUNER CIRCUIT PC BOARD

CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitors	
C149	354780479	4.7 μ F,50V,Elect.
C151,C152	354780109	1 μ F,50V,Elect.
C153	354783399	0.33 μ F,50V,Elect.
C154	354741009	10 μ F,16V,Elect.
C155,C156	374721034	0.01 μ F±5%,50V,Plastic <D>
	374724724	4700pF±5%,50V,Plastic <P>
	374725624	5600pF±5%,50V,Plastic <W>
C159	354780229	2.2 μ F,50V,Elect.
C160	354784799	0.47 μ F,50V,Elect.
C162,C166	354741009	10 μ F,16V,Elect.
C171,C172	354741009	10 μ F,16V,Elect.
C173,C174	374721024	1000pF±5%,50V,Plastic <D>
C175,C176	354741009	10 μ F,16V,Elect.
C177	354780229	2.2 μ F,50V,Elect.
C178,C179	354741009	10 μ F,16V,Elect.
C183,C189	374724724	4700pF±5%,50V,Plastic <P>
C184	374722234	0.022 μ F±5%,50V,Plastic <P>
C185	374724734	0.047 μ F±5%,50V,Plastic <P>
C186	354780229	2.2 μ F,50V,Elect. <P>
C187,C188	374723324	3300pF±5%,50V,Plastic <P>
C190	354721019	100 μ F,6.3V,Elect. <P>

CIRCUIT NO.	PART NO.	DESCRIPTION
	Resistors	
R150	5210261	N06HR5KBC, Trimming
R158	5210264	N06HR30KBC, Trimming
R191	5210265	N06HR50KBC, Trimming <P>
	Terminal	
P101	25060160 or	NTM-4PDML086 or
	25060225	NTM-4PDML147, Antenna <D>
	25060117 or	NTM-2PDMN051 or
	25060222	NTM-2PDML144,Antenna <P/W>
	Socket	
P201	25050986	NSCT-14P773 <D/W>
	25050987	NSCT-16P774 <P>
	Plugs	
TP101	25055038	NPLG-2P29
TP102	25055038	NPLG-2P29 <P>

BLOCK DIAGRAM

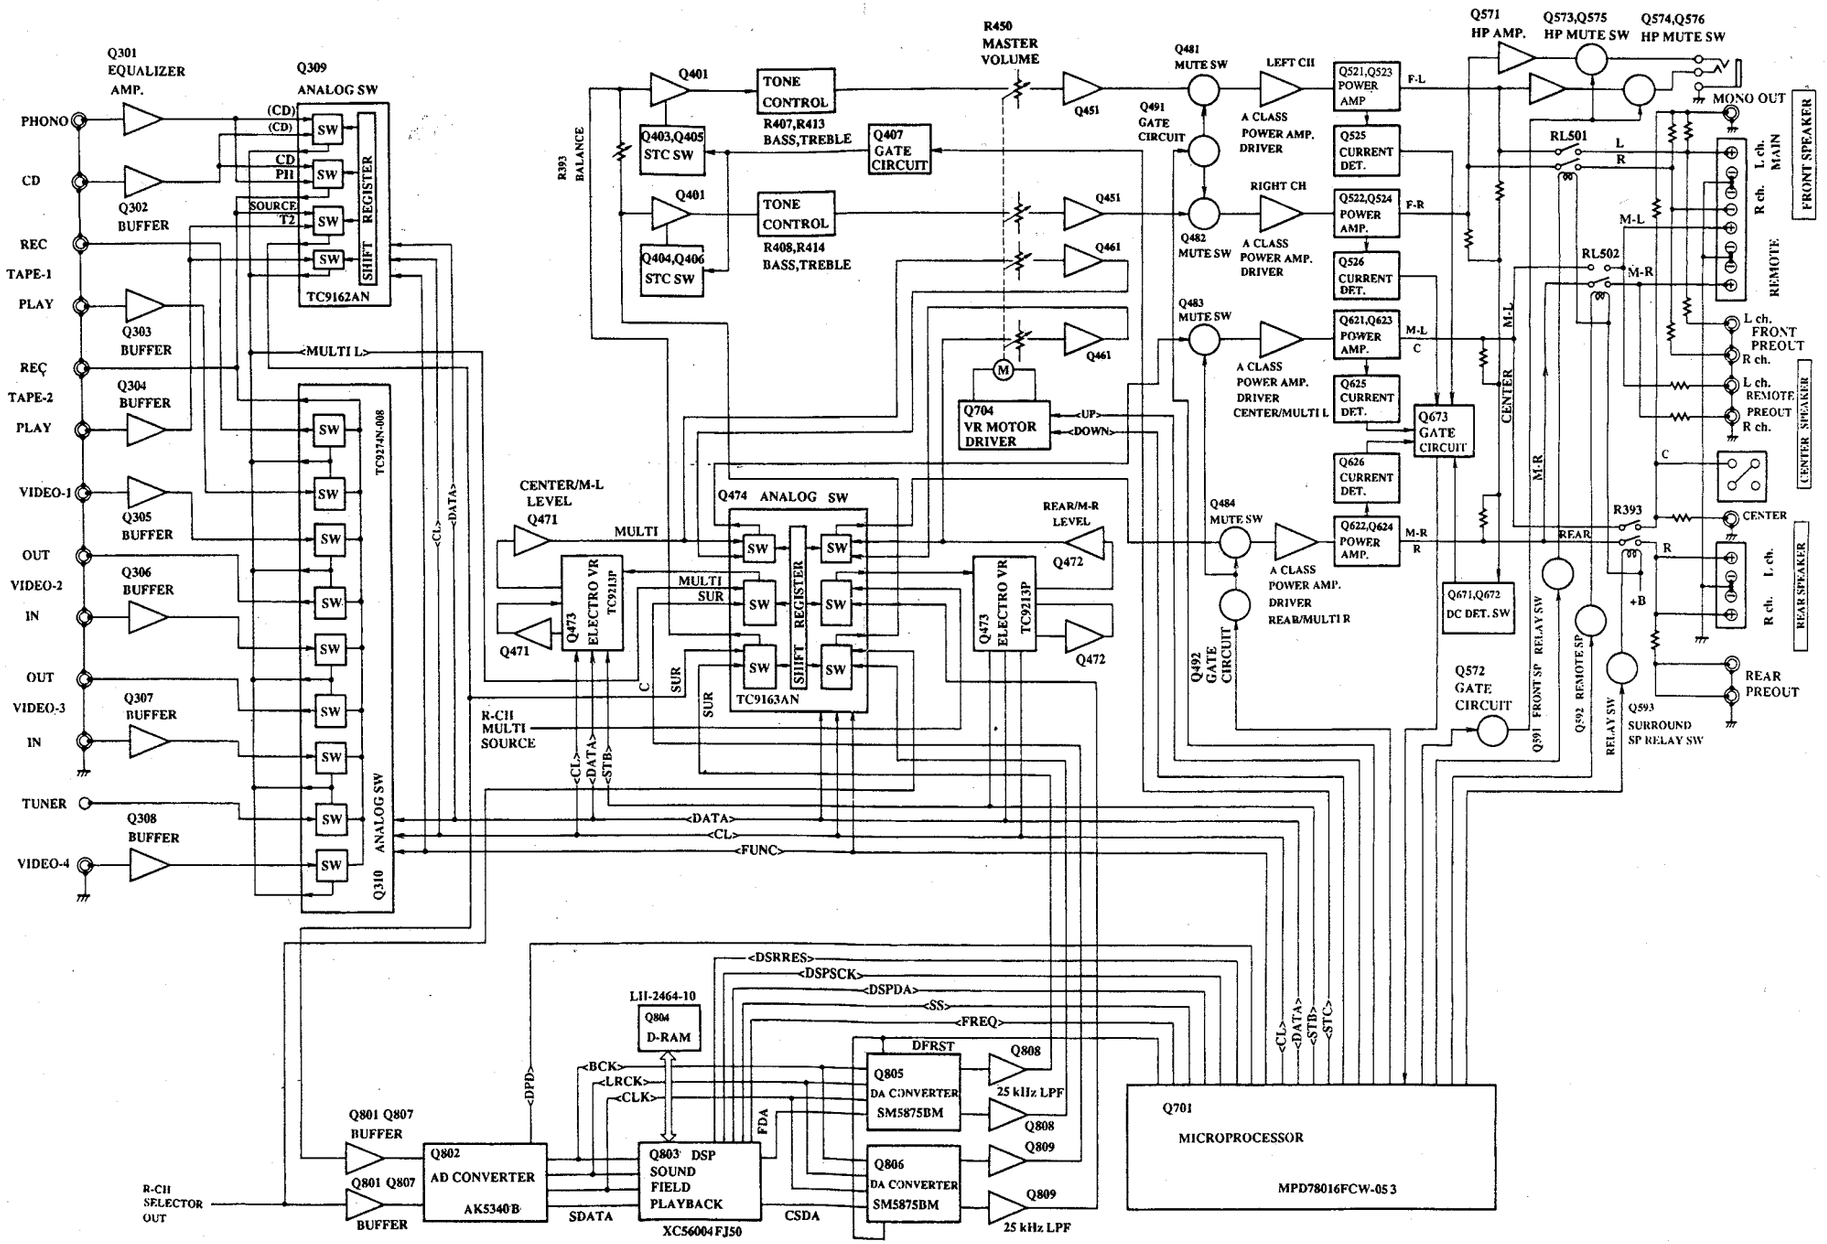

PACKING VIEW

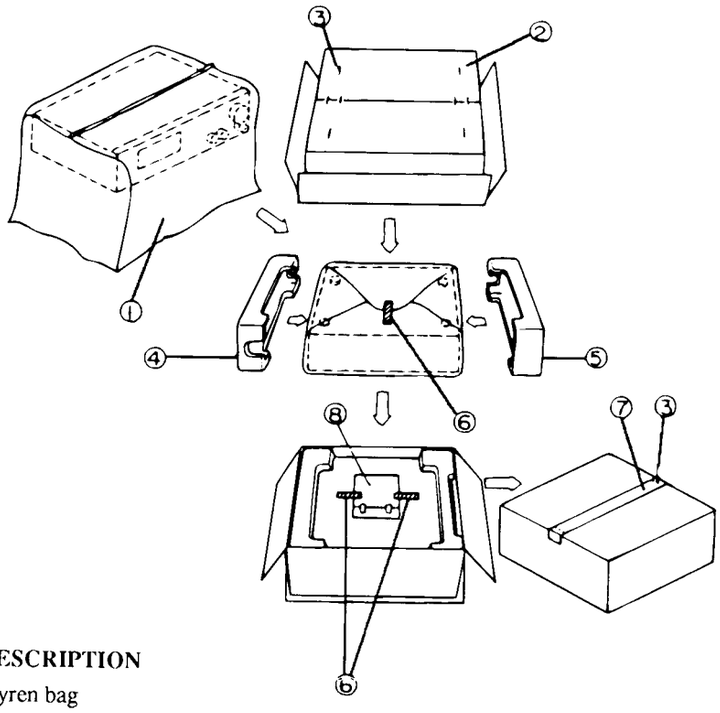

REF.NO.	PART NO.	DESCRIPTION
1	29100034-1AY	Styren bag
2	29053018Y	Carton box <D/X>
	29053069Y	Carton box <W>
	29053019Y	Carton box <P>
3	282301	Staple
4	29091733AY	Pad R
5	29091732AY	Pad L
6	261504	Paper tape
7	29110071	PP tape
8	Accessary bag ass'y	
	29100097-1AY	Styren bag
	24140036	RC-P101S, Remote control transmitter <D>
	24140037	RC-P201S, Remote control transmitter <P/W>
	3010054	UM-3, Battery
	232140	NMA-3057, AM loop antenna
	292111	FM antenna <D>
	292112	FM antenna <P/W>
	29342315AY	Instruction manual
	29342316Y	Instruction manual <P>
	29342317Y	Instruction manual <P>
	29342318Y	Instruction manual <C/W>
	29342353Y	Instruction manual, remote control
	2010200	Cord RI
	29365019B	Warranty card <N>
	29365021	Warranty card <X>

NOTES

The TX-SV636(B)MPT type (Taiwanese model) is the same as the TX-SV636(B)MP type (230V model) with the exception of the following sections.

		MPT type		MP type	
REF.NO.	PART NAME	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
U1	Main circuit pcb ass'y	1A651568-1EY	NAAR-5768-1E	1A651568-1BY	NAAR-5768-1B
U2	Secondary circuit pcb ass'y	1A651569-1EY	NAETC-5769-1E	1A651569-1BY	NAETC-5769-1B
U4	Display circuit pcb ass'y	1A651570-1CY	NADG-5770-1C	1A651570-1BY	NADG-5770-1B
U5	Master volume circuit pcb ass'y	1A651571-1CY	NAAF-5771-1C	1A651571-1BY	NAAF-5771-1B
U6	Headphone terminal pcb ass'y	1A651572-1EY	NAETC-5772-1E	1A651572-1BY	NAETC-5772-1B
U7	Primary circuit pcb ass'y	1A651573-1EY	NAPS-5773-1E	1A651573-1BY	NAPS-5773-1B
U8	Tuner circuit pcb ass'y	1A651574-1EY	NARF-5774-1E	1A651574-1BY	NARF-5774-1B
U10	Video circuit pcb ass'y	1A651575-1EY	NAETC-5775-1E	1A651575-1BY	NAETC-5775-1B
U12	Speaker terminal pcb ass'y	1A651576-1EY	NAETC-5776-1E	1A651576-1BY	NAETC-5776-1B
U14	Tone control circuit pcb ass'y	1A651577-1EY	NAAF-5777-1E	1A651577-1BY	NAAF-5777-1B
U15	Front terminal pcb ass'y	1A651578-1EY	NAETC-5778-1E	1A651578-1BY	NAETC-5778-1B
U16	Pre. output terminal pcb ass'y	1A651579-1EY	NAETC-5779-1E	1A651579-1BY	NAETC-5779-1B
U17	MR/RI terminal pcb ass'y	1A651580-1EY	NAETC-5780-1E	1A651580-1BY	NAETC-5780-1B
U18	Transformer terminal pcb ass'y	1A651581-1EY	NAETC-5781-1E	1A651581-1BY	NAETC-5781-1B
	Instruction manual	29342318Y	FST	29342316Y	GFI
	Instruction manual	Not used		29342317Y	SDSW
	FM antenna adaptor	25065462		Not used	
	Rear panel	27122227Y		27122226Y	
	Knob,power	Not used		28325306Y	
	Decorative frame	27215253AY		27215256AY	
	Front panel ass'y	1A651121Y		1A704121Y	
	Carton box	29053069Y		29053019Y	

The TX-SV636(B)MGK type (Korean model) is the same as the TX-SV636(B)MP type (230V model) with the exception of the following sections.

		MGK type		MP type	
REF.NO.	PART NAME	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
U1	Main circuit pcb ass'y	1A651568-1FY	NAAR-5768-1F	1A651568-1BY	NAAR-5768-1B
U2	Secondary circuit pcb ass'y	1A651569-1FY	NAETC-5769-1F	1A651569-1BY	NAETC-5769-1B
U4	Display circuit pcb ass'y	1A651570-1CY	NADG-5770-1C	1A651570-1BY	NADG-5770-1B
U5	Master volume circuit pcb ass'y	1A651571-1CY	NAAF-5771-1C	1A651571-1BY	NAAF-5771-1B
U6	Headphone terminal pcb ass'y	1A651572-1FY	NAETC-5772-1F	1A651572-1BY	NAETC-5772-1B
U7	Primary circuit pcb ass'y	1A651573-1FY	NAPS-5773-1F	1A651573-1BY	NAPS-5773-1B
U8	Tuner circuit pcb ass'y	1A651574-1FY	NARF-5774-1F	1A651574-1BY	NARF-5774-1B
U10	Video circuit pcb ass'y	1A651575-1FY	NAETC-5775-1F	1A651575-1BY	NAETC-5775-1B
U12	Speaker terminal pcb ass'y	1A651576-1FY	NAETC-5776-1F	1A651576-1BY	NAETC-5776-1B
U14	Tone control circuit pcb ass'y	1A651577-1FY	NAAF-5777-1F	1A651577-1BY	NAAF-5777-1B
U15	Front terminal pcb ass'y	1A651578-1FY	NAETC-5778-1F	1A651578-1BY	NAETC-5778-1B
U16	Pre. output terminal pcb ass'y	1A651579-1FY	NAETC-5779-1F	1A651579-1BY	NAETC-5779-1B
U17	MR/RI terminal pcb ass'y	1A651580-1FY	NAETC-5780-1F	1A651580-1BY	NAETC-5780-1B
U18	Transformer terminal pcb ass'y	1A651581-1FY	NAETC-5781-1F	1A651581-1BY	NAETC-5781-1B
T901	Power transformer	2301073Y	NPT-1230DG	2301072Y	NPT-1230P
P901	Power supply cord	253213WSE	KS-AS	253193HIT	AS-CEE
F903	Fuse	Not used		252075	2.5A-SE-EAK
P904,P905	AC outlet	25051266	NSCT-2P1056	Not used	
	Instruction manual	Not used		29342316Y	GFI
	Instruction manual	Not used		29342317Y	SDSW
	FM antenna adaptor	25065462		Not used	
	Rear panel	27122259Y		27122226Y	
	Knob,power	Not used		28325306Y	
	Decorative frame	27215253AY		27215256AY	
	Front panel ass'y	1A651121Y		1A704121Y	
	Carton box	29053069Y		29053019Y	

ONKYO CORPORATION

International Sales Div. : 31 Sankyo-bild. 3-8-5, Asakusabashi, Taito-ku, TOKYO 111, JAPAN
TEL : 03-5820-5865 FAX : 03-5820-5869

ONKYO U.S.A. CORPORATION
200 Williams Drive, Ramsey, N.J. 07446, U.S.A.
TEL : 201-825-7950 FAX : 201-825-8150

ONKYO EUROPE ELECTRONICS GmbH
Industriestrasse 18-20, 82110 Germering, GERMANY
TEL : 089 84 93 20 FAX : 089 84 93 226

ONKYO FRANCE
Immeuble Le Diamant, Domaine Technologique de Saclay, 4 Rue Rene Razel,
TEL : (1) 69 33 14 00 FAX : (1) 69 41 35 84

Printed in Jap